

# Digital Storage Oscilloscope

GDS-1000A-U Series

---

## USER MANUAL

GW INSTEK PART NO. 82DS-112AUEA1



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

April 2011 edition

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve its products and therefore reserves the right to change the specifications, equipment, and maintenance procedures at any time without notice.

**Good Will Instrument Co., Ltd.**  
**No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.**

# Table of Contents

|                                   |           |
|-----------------------------------|-----------|
| <b>SAFETY INSTRUCTIONS</b>        | <b>8</b>  |
| Safety Symbols                    | 8         |
| Safety Guidelines                 | 9         |
| Power cord for the United Kingdom | 12        |
| <b>GETTING STARTED</b>            | <b>13</b> |
| Main Features                     | 13        |
| Panel Overview                    | 15        |
| Front Panel                       | 15        |
| Rear Panel                        | 19        |
| Display                           | 20        |
| Setting up the Oscilloscope       | 21        |
| <b>QUICK REFERENCE</b>            | <b>24</b> |
| Menu Tree and Shortcuts           | 24        |
| CH1/CH2 key                       | 25        |
| Cursor key 1/2                    | 26        |
| Cursor key 2/2                    | 26        |
| Display key                       | 27        |
| Autoset key                       | 27        |
| Hardcopy key                      | 27        |
| Help key                          | 28        |
| Horizontal menu key               | 28        |
| Math key 1/2 (+/-/x)              | 29        |
| Math key 2/2 (FFT/FFT rms)        | 30        |
| Measure key                       | 31        |
| Run/Stop key                      | 31        |
| Save/Recall key 1/10              | 32        |
| Save/Recall key 2/10              | 32        |
| Save/Recall key 3/10              | 33        |
| Save/Recall key 4/10              | 33        |
| Save/Recall key 5/10              | 34        |
| Save/Recall key 6/10              | 34        |
| Save/Recall key 7/10              | 35        |
| Save/Recall key 8/10              | 35        |
| Save/Recall key 9/10              | 36        |
| Save/Recall key 10/10             | 36        |
| Trigger key 1/6                   | 37        |

|                                                  |           |
|--------------------------------------------------|-----------|
| Trigger key 2/6 .....                            | 37        |
| Trigger key 3/6 .....                            | 38        |
| Trigger key 4/6 .....                            | 38        |
| Trigger key 5/6 .....                            | 39        |
| Trigger key 6/6 .....                            | 39        |
| Utility key 1/11 (Utility #1) .....              | 40        |
| Utility key 2/11 (Utility #2) .....              | 40        |
| Utility key 3/11 (Utility #3) .....              | 41        |
| Utility key 4/11 (Hardcopy -Save All).....       | 41        |
| Utility key 5/11 (Hardcopy -Printer) .....       | 42        |
| Utility key 6/11 (Hardcopy -Save Image).....     | 42        |
| Utility key 7/11 (Probe compensation) .....      | 43        |
| Utility key 8/11 (Go-NoGo) .....                 | 43        |
| Utility key 9/11 (Data Logging 1/2) .....        | 44        |
| Utility key 10/11 (Data Logging 2/2) .....       | 44        |
| Utility key 11/11 (Self CAL Menu) .....          | 44        |
| Default Settings.....                            | 45        |
| Built-in Help.....                               | 46        |
| <b>MEASUREMENT .....</b>                         | <b>47</b> |
| Basic Measurements .....                         | 47        |
| Activating a channel.....                        | 47        |
| Using Autoset .....                              | 48        |
| Running and stopping the trigger .....           | 50        |
| Changing the horizontal position and scale.....  | 51        |
| Changing the vertical position and scale .....   | 52        |
| Using the probe compensation signal .....        | 53        |
| Automatic Measurements.....                      | 55        |
| Measurement items.....                           | 55        |
| Automatic measurement gating.....                | 57        |
| Automatically measuring the input signals.....   | 58        |
| Cursor Measurements .....                        | 61        |
| Using the horizontal cursors .....               | 61        |
| Using the vertical cursors .....                 | 62        |
| Math Operations .....                            | 63        |
| Overview.....                                    | 63        |
| Adding, subtracting or multiplying signals ..... | 64        |
| Using the FFT function .....                     | 65        |
| Go No-Go Testing.....                            | 67        |
| Overview.....                                    | 67        |
| Edit: NoGo When.....                             | 68        |
| Edit: Source.....                                | 68        |
| Edit: NoGo Violation Conditions.....             | 69        |

|                                                  |           |
|--------------------------------------------------|-----------|
| Edit: Template (boundary) .....                  | 69        |
| Run Go-NoGo Tests .....                          | 73        |
| Data Logging .....                               | 74        |
| Overview .....                                   | 74        |
| Edit: Source .....                               | 75        |
| Edit: Setup Parameters .....                     | 75        |
| Run Data logging .....                           | 77        |
| <b>CONFIGURATION .....</b>                       | <b>78</b> |
| Acquisition .....                                | 78        |
| Selecting the acquisition mode .....             | 78        |
| Selecting Delay mode .....                       | 80        |
| Real time vs Equivalent time sampling mode ..... | 82        |
| Display .....                                    | 83        |
| Selecting vector or dot drawing .....            | 83        |
| Accumulating the waveform .....                  | 83        |
| Adjusting the display contrast .....             | 84        |
| Selecting the display grid .....                 | 84        |
| Horizontal View .....                            | 85        |
| Moving the waveform position horizontally .....  | 85        |
| Selecting the horizontal scale .....             | 85        |
| Selecting the waveform update mode .....         | 86        |
| Zooming the waveform horizontally .....          | 87        |
| Viewing waveforms in the X-Y mode .....          | 88        |
| Horizontal Adjustment Menu .....                 | 89        |
| Vertical View (Channel) .....                    | 91        |
| Moving the waveform position vertically .....    | 91        |
| Selecting the vertical scale .....               | 91        |
| Selecting the coupling mode .....                | 91        |
| Expand Vertical Scale Center / Ground .....      | 92        |
| Inverting the waveform vertically .....          | 93        |
| Limiting the waveform bandwidth .....            | 94        |
| Probe attenuation level and type .....           | 94        |
| Trigger .....                                    | 96        |
| Trigger type .....                               | 96        |
| Trigger parameter .....                          | 96        |
| Configuring Holdoff .....                        | 98        |
| Configuring the edge trigger .....               | 99        |
| Configuring the video trigger .....              | 100       |
| Configuring the pulse width trigger .....        | 101       |
| Manually triggering the signal .....             | 103       |
| Rear Panel USB Port Interface .....              | 104       |
| Remote Control Interface .....                   | 105       |

|                                                            |            |
|------------------------------------------------------------|------------|
| System Settings .....                                      | 107        |
| Viewing the system information .....                       | 107        |
| Selecting the language .....                               | 107        |
| <b>SAVE/RECALL .....</b>                                   | <b>109</b> |
| File Structures .....                                      | 109        |
| Display image file format .....                            | 109        |
| Waveform file format .....                                 | 109        |
| Setup file format .....                                    | 112        |
| Using the USB file utilities .....                         | 113        |
| Quick Save (HardCopy) .....                                | 115        |
| Save .....                                                 | 117        |
| File type/source/destination .....                         | 117        |
| Saving the panel settings .....                            | 118        |
| Saving the waveform .....                                  | 119        |
| Saving the display image .....                             | 121        |
| Saving all (panel settings, display image, waveform) ..... | 122        |
| Recall .....                                               | 124        |
| File type/source/destination .....                         | 124        |
| Recalling the default panel settings .....                 | 125        |
| Recalling a reference waveform to the display .....        | 126        |
| Recalling panel settings .....                             | 126        |
| Recalling a waveform .....                                 | 127        |
| Recall Image .....                                         | 129        |
| <b>PRINT .....</b>                                         | <b>131</b> |
| Print (Hardcopy) .....                                     | 131        |
| <b>MAINTENANCE .....</b>                                   | <b>134</b> |
| Vertical Resolution Calibration .....                      | 134        |
| Probe Compensation .....                                   | 135        |
| <b>FAQ .....</b>                                           | <b>137</b> |
| The input signal does not appear in the display. ....      | 137        |
| I want to remove some contents from the display. ....      | 137        |
| The waveform does not update (frozen). ....                | 138        |
| The probe waveform is distorted. ....                      | 138        |
| Autoset does not catch the signal well. ....               | 138        |
| I want to clean up the cluttered panel settings. ....      | 138        |
| The saved display image is too dark on the background. .   | 138        |
| The accuracy does not match the specifications. ....       | 139        |

---

|                                                                     |            |
|---------------------------------------------------------------------|------------|
| The oscilloscope will not allow a 2M waveform to be saved.<br>..... | 139        |
| <b>APPENDIX.....</b>                                                | <b>140</b> |
| Fuse Replacement .....                                              | 140        |
| GDS-1000A-U Series Specifications .....                             | 141        |
| Model-specific specifications .....                                 | 141        |
| Common specifications .....                                         | 142        |
| Probe Specifications .....                                          | 144        |
| GDS-1072A-U Probe.....                                              | 144        |
| GDS-1102A-U Probe.....                                              | 144        |
| GDS-1152A-U Probe.....                                              | 145        |
| Dimensions .....                                                    | 146        |
| EC Declaration of Conformity .....                                  | 147        |
| <b>INDEX.....</b>                                                   | <b>148</b> |

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that should be followed when operating and storing the oscilloscope. Read the following before any operation to ensure your safety and to keep the oscilloscope in the best condition.

## Safety Symbols

These safety symbols may appear in this manual or on the oscilloscope.

---



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the oscilloscope or to other objects or property.



DANGER High Voltage



Attention: Refer to the Manual



Protective Conductor Terminal



Earth (Ground) Terminal





Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

### General Guideline



#### CAUTION

- Make sure the BNC input voltage does not exceed 300V peak.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place heavy objects on the oscilloscope.
- Avoid severe impact or rough handling that may damage the oscilloscope.
- Avoid discharges of static electricity on or near the oscilloscope.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan vent.
- Do not perform measurements at power sources and building installation sites (Note below).
- The oscilloscope should only be disassembled by a qualified technician.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The GDS-1000A-U falls under category II.

- Measurement category IV is for measurement performed at the source of a low-voltage installation.
  - Measurement category III is for measurement performed in a building installation.
  - Measurement category II is for measurement performed on circuits directly connected to a low voltage installation.
  - Measurement category I is for measurements performed on circuits not directly connected to Mains.
-

Power Supply



WARNING

- AC Input voltage: 100 ~ 240V AC, 47 ~ 63Hz
- The power supply voltage should not fluctuate more than 10%.
- Connect the protective grounding conductor of the AC power cord to an earth ground.

Fuse



WARNING

- Fuse type: T1A/250V
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before replacing the fuse.
- Make sure the cause of fuse blowout is fixed before replacing the fuse.

Cleaning the oscilloscope

- Disconnect the power cord before cleaning the oscilloscope.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the oscilloscope.
- Do not use chemicals containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity:  $\leq 80\%$ , 40°C or below  
 $\leq 45\%$ , 41°C~50°C
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN 61010-1:2001 specifies pollution degrees and their requirements as follows. The oscilloscope falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

---

Storage  
environment

- Location: Indoor
- Storage Temperature: -10°C~60°C, no condensation-
- Relative Humidity: 93% @ 40°C  
65% @ 41°C ~60°C

---

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

## Power cord for the United Kingdom

When using the oscilloscope in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



**WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

|                |              |
|----------------|--------------|
| Green/ Yellow: | Earth        |
| Blue:          | Neutral      |
| Brown:         | Live (Phase) |



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol (⊕) or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm<sup>2</sup> should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

# G ETTING STARTED

The Getting started chapter introduces the oscilloscope's main features, appearance, and set up procedure.

## Main Features


| Model name  | Frequency bandwidth                                                                                                                                                                                                                                                                                                                                                                         | Input channels |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| GDS-1072A-U | DC – 70MHz (–3dB)                                                                                                                                                                                                                                                                                                                                                                           | 2              |
| GDS-1102A-U | DC – 100MHz (–3dB)                                                                                                                                                                                                                                                                                                                                                                          | 2              |
| GDS-1152A-U | DC – 150MHz (–3dB)                                                                                                                                                                                                                                                                                                                                                                          | 2              |
| Performance | <ul style="list-style-type: none"><li>• 1 GS/s real-time sampling rate</li><li>• 25GS/s equivalent-time sampling rate</li><li>• 2M points record length</li><li>• Up to 10ns peak detection</li><li>• 2mV~10V vertical scale</li><li>• 1ns ~ 50s time scale</li></ul>                                                                                                                       |                |
| Features    | <ul style="list-style-type: none"><li>• 5.7 inch color TFT display</li><li>• Saving and recalling setups and waveforms</li><li>• 27 automatic measurements</li><li>• Multi-language menu (12 languages)</li><li>• Math operation: Addition, Subtraction, multiplication, FFT, FFT RMS</li><li>• Data logging</li><li>• Go-NoGo testing</li><li>• Edge, video, pulse width trigger</li></ul> |                |

---

|           |                                                                                                                                                                                                                                                                     |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|           | <ul style="list-style-type: none"><li>• Compact size: (W) 310 x (D) 140 x (H) 142 mm</li><li>• Probe factor from 0.1X~2000X voltage/current</li></ul>                                                                                                               |
| Interface | <ul style="list-style-type: none"><li>• USB 2.0 full-speed interface for saving and recalling data</li><li>• Calibration output</li><li>• External trigger input</li><li>• USB slave interface for remote control</li><li>• PictBridge Printer compatible</li></ul> |

# Panel Overview

## Front Panel

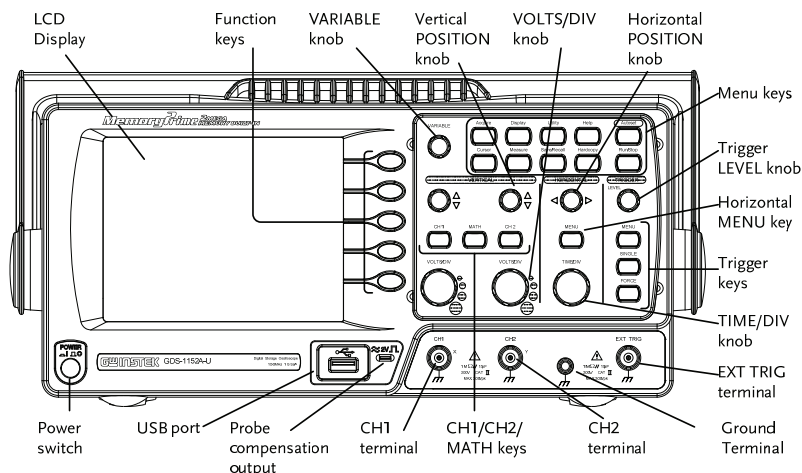

LCD display      TFT color, 320 x 234 resolution, wide angle view LCD display.

Function keys:  
F1 (top) to  
F5 (bottom)



Activates the functions which appear in the left side of the LCD display.

Variable knob

VARIABLE



Increases or decreases values and moves to the next or previous parameter.

Acquire key

Acquire



Configures the acquisition mode (page 78).

Display key

Display



Configures the display settings (page 83).

Cursor key

Cursor




Runs cursor measurements (page 61).

(Continued on next page)


|                    |                                                                                     |                                                                                                                                                                                                                                                             |
|--------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Utility key        |    | Configures the Hardcopy function (page 115), shows the system status (page 107), selects the menu language (page 107), runs the self calibration (page 134), configures the probe compensation signal (page 135), and selects the USB host type (page 104). |
| Help key           |    | Shows the Help contents on the display (page 46).                                                                                                                                                                                                           |
| Autoset key        |    | Automatically configures the horizontal, vertical, and trigger settings according to the input signal (page 48).                                                                                                                                            |
| Measure key        |    | Configures and runs automatic measurements (page 55).                                                                                                                                                                                                       |
| Save/Recall key    |    | Saves and recalls images, waveforms, or panel settings (page 109).                                                                                                                                                                                          |
| Hardcopy key       |    | Stores images, waveforms, or panel settings to USB (page 115), or prints screen images to a PictBridge compatible printer (page 131).                                                                                                                       |
| Run/Stop key       |  | Runs or stops triggering (page 50).                                                                                                                                                                                                                         |
| Trigger level knob |  | Sets the trigger level (page 96).                                                                                                                                                                                                                           |
| Trigger menu key   |  | Configures the trigger settings (page 96).                                                                                                                                                                                                                  |
| Single trigger key |  | Selects the single triggering mode (page 103).                                                                                                                                                                                                              |




|                           |                                                                                     |                                                                                            |
|---------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Trigger force key         |    | Acquires the input signal once regardless of the trigger condition at the time (page 103). |
| Horizontal menu key       |    | Configures the horizontal view (page 85).                                                  |
| Horizontal position knob  |    | Moves the waveform horizontally (page 85).                                                 |
| TIME/DIV knob             |    | Selects the horizontal scale (page 85).                                                    |
| Vertical position knob    |    | Moves the waveform vertically (page 91).                                                   |
| CH1/CH2 key               |    | Configures the vertical scale and coupling mode for each channel (page 91).                |
| VOLTS/DIV knob            |    | Selects the vertical scale (page 91).                                                      |
| Input terminal            |    | Accepts input signals: $1M\Omega \pm 2\%$ input impedance, BNC terminal.                   |
| Ground terminal           |  | Accepts the DUT ground lead to achieve a common ground.                                    |
| MATH key                  |  | Performs math operations (page 63).                                                        |
| USB port                  |  | Facilitates transferring waveform data, display images, and panel settings (page 109).     |
| Probe compensation output |  | Outputs a 2Vp-p, square signal for compensating the probe (page 135) or demonstration.     |

|                        |                                                                                                       |                                               |
|------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| External trigger input | <div>EXT TRIG</div>  | Accepts an external trigger signal (page 96). |
| Power switch           | <div>POWER</div>     | Powers the oscilloscope on or off.            |

## Rear Panel

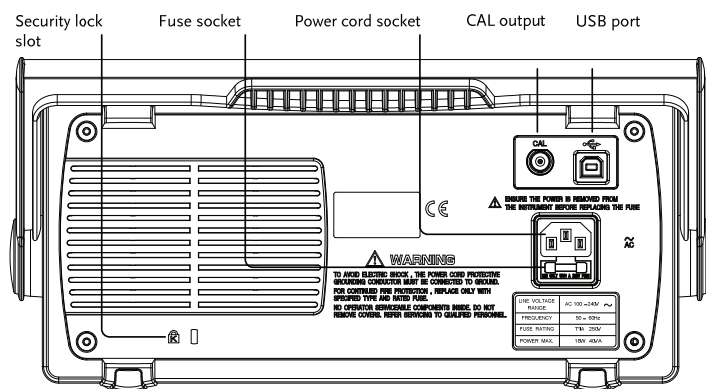

Power cord socket

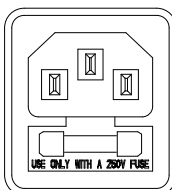


Power cord socket accepts the AC mains, 100 ~ 240V, 50/60Hz.

Fuse socket

The fuse socket holds the AC main fuse, T1A/250V.

For the fuse replacement procedure, see page 140.

USB slave port



Accepts a type B (slave) male USB connector for remote control of the oscilloscope (page 104) or to print directly to a PictBridge compatible printer.

Calibration output




Outputs the calibration signal used in vertical scale accuracy calibration (page 134).

Security lock slot



Standard laptop security lock slot for ensuring the security of the GDS-1000A-U.

Display

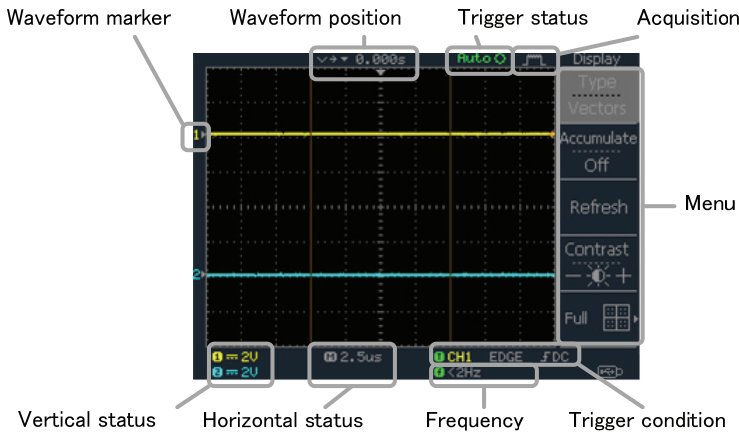

| Waveforms              | Channel 1: Yellow                                                                                                                                                                                   | Channel 2: Blue                                            |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| Trigger status         | Trig'd                                                                                                                                                                                              | A signal is being triggered                                |
|                        | Trig?                                                                                                                                                                                               | Waiting for a trigger condition                            |
|                        | Auto                                                                                                                                                                                                | Updating the input signal regardless of trigger conditions |
|                        | STOP                                                                                                                                                                                                | Triggering is stopped                                      |
|                        | For trigger setting details, see page 96.                                                                                                                                                           |                                                            |
| Input signal frequency | Updates the input signal frequency (the trigger source signal) in real-time.<br><br>“< 2Hz” Indicates that the signal frequency is less than the lower frequency limit (2Hz) and thus not accurate. |                                                            |
| Trigger configuration  | Shows the trigger source, type, and slope. In case of the Video trigger, shows the trigger source and polarity.                                                                                     |                                                            |
| Horizontal status      | Shows the channel configurations: coupling mode, vertical scale, and horizontal scale.                                                                                                              |                                                            |
| Vertical status        |                                                                                                                                                                                                     |                                                            |


## Setting up the Oscilloscope

### Background


This section describes how to set up the oscilloscope properly including adjusting the handle, connecting a signal, adjusting the scale, and compensating the probe. Before operating the oscilloscope in a new environment, run these steps to make sure the oscilloscope is functionally stable.

### Procedure


1. Pull both bases of the handle out slightly.



2. Turn to one of the three preset positions.

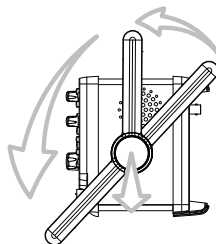


3. Connect the power cord.




4. Press the power switch. The display will become active in approximately 10 seconds.



5. Reset the system by recalling the factory settings. Press the Save/Recall key, then *Default Setup*. For details regarding the factory settings, see page 45.





6. Connect the probe between the Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).
7. Set the probe attenuation voltage to x10.

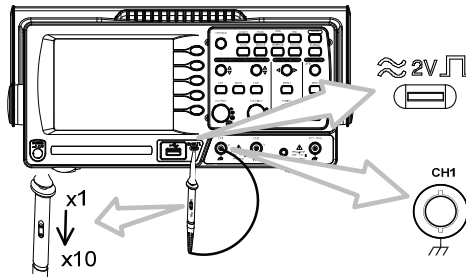


8. Press the Autoset key. A square waveform will appear in the center of the display. For details on Autoset, see page 48.



9. Press the Display key, then *Type* and select the vector waveform type.

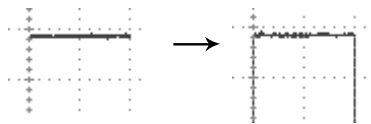

10. Turn the adjustment point on the probe to flatten the square waveform edge.

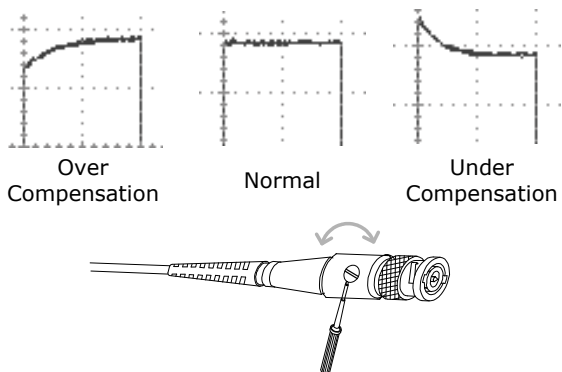

11. Setting up the oscilloscope is complete. You may continue with the other operations.

Measurement: page 47   Configuration: page 78

# QUICK REFERENCE


This chapter lists the oscilloscope menu tree, operation shortcuts, built-in help coverage, and default factory settings. Use this chapter as a handy reference to access the oscilloscope functions.

## Menu Tree and Shortcuts

---

| Conventions                                                                                    | Examples                                                                   |
|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Normal                                                                                         | = Press the functional key for “Normal”                                    |
| Average       | = Repeatedly press the functional key for “Average”                        |
| Normal ~ Average                                                                               | = Select a menu from “Normal” to “Average” and press its functionality key |
| Normal → VAR  | = Press the functionality key for “Normal”, and then use the Variable knob |



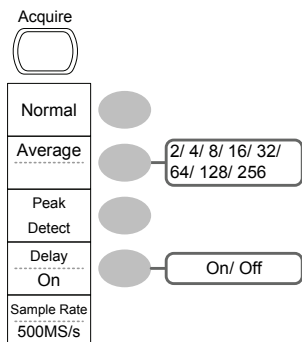

Select acquisition mode

Normal ~ Peak-Detect


Select average number

Average ↩

Turn Delay on/off

Delay On ↩

## CH1/CH2 key

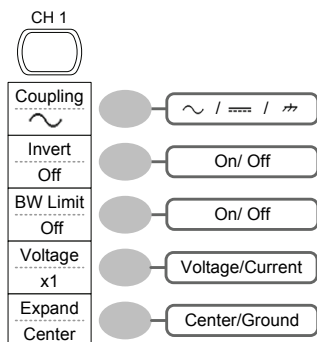

Turn channel on/off

CH 1/2 ↩

Select coupling mode

Coupling ↩

Invert waveform

Invert ↩

Turn bandwidth limit on/off

BW Limit ↩

Select probe type

Voltage↔Current


Select probe attenuation

VAR ⌚ (0.1x~2000x) (1-2-5 step)

Expand type

Expand ↩

## Cursor key 1/2

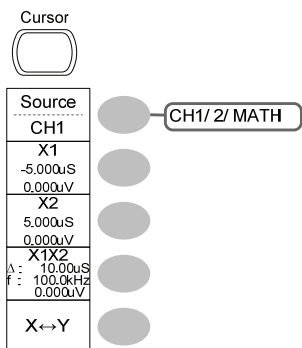

Turn cursor on/off

Cursor

Move X1 cursor

X1 → VAR

Move X2 cursor

X2 → VAR


Move both X1 and X2 cursor

X1X2 → VAR

Switch to Y cursor

X ↔ Y

## Cursor key 2/2

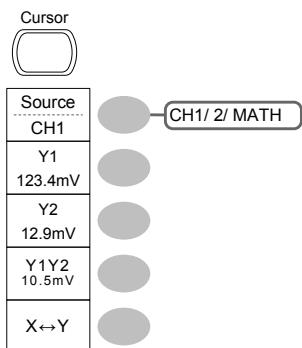

Turn cursor on/off

Cursor

Move Y1 cursor

Y1 → VAR

Move Y2 cursor

Y2 → VAR


Move both Y1 and Y2 cursor

Y1Y2 → VAR

Switch to X cursor

X ↔ Y

## Display key

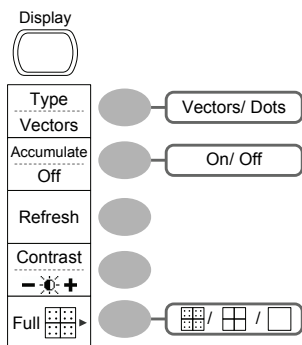

Select waveform type

Type ↩

Waveform accumulate On/Off

Accumulate ↩

Refresh accumulation

Refresh


Set display contrast

Contrast → VAR ⌚

Select display grid



## Autoset key

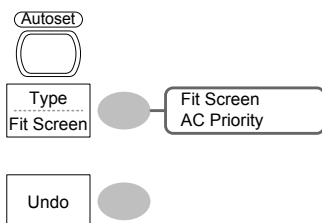

Automatically find the signal and set the scale

Autoset

Change the Type of Autoset mode.

Type ↩ (available for a few seconds)

Undo Autoset

Undo ↩ (available for a few seconds)

## Hardcopy key

Hardcopy



→ See Utility key (page 40)


## Help key



Turn help mode on/off

Help ↵

## Horizontal menu key

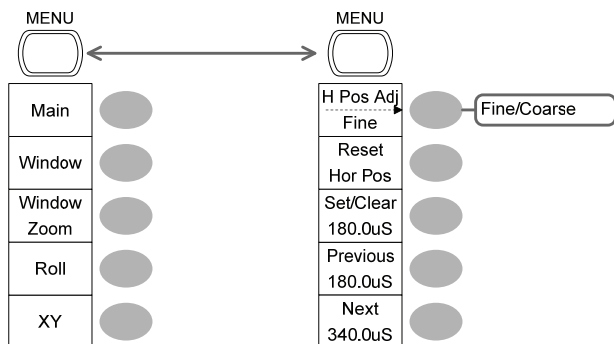

Switch from Horizontal Menu to Horizontal Position Menu. Horizontal MENU ↵

Select main (default) display Main

Select window mode Window → TIME/DIV ⌚

Zoom in window mode Window Zoom

Select window roll mode Roll

Select XY mode XY

Toggle adjustment mode H Pos Adj ↵


Reset horizontal marker Reset

Set Horizontal marker/delete horizontal marker. HOR ⌚ → Set/Clear

Navigate to previous horizontal marker. Previous

Navigate to next horizontal marker. Next

## Math key 1/2 (+/-/x)

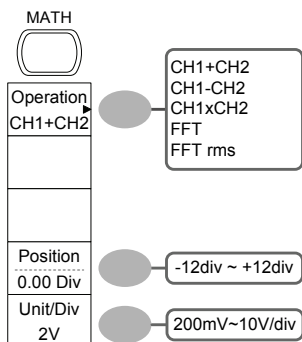

Math on/off

Math

Select math operation type (+/-  
/x/FFT/FFT rms)

Operation


Set result position

Position→VAR

Math result Volt/Div

Unit/Div→VOLTS/DIV(CH2)

## Math key 2/2 (FFT/FFT rms)

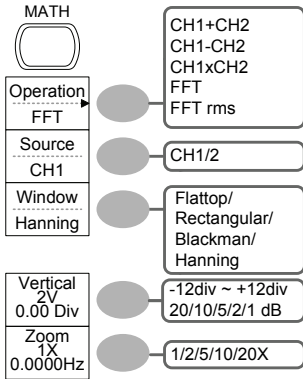

Math on/off

Math

Select math operation type (+/-  
/x/FFT/FFT rms)

Operation

Select FFT source channel

Source

Select FFT window

Window

Select FFT result position

Vertical  $\rightarrow$  VAR

Select vertical scale

Vertical  $\rightarrow$  VOLTS/DIV

Select vertical units

Vertical


Select Zoom level

Zoom(X)  $\rightarrow$  VAR

Select Horizontal position

Zoom(Hz)  $\rightarrow$  VAR

## Measure key

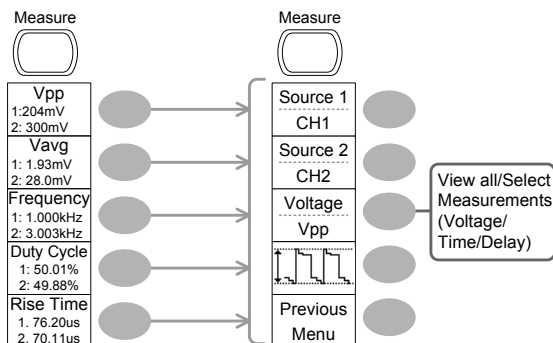

Turn on/off measurement

Measure

Select measurement type

Voltage/Time/Delay

Select measurement item

VAR or Icon(F3) / → VAR

Go back to previous menu

Previous Menu

## Run/Stop key


Run/Stop



Freeze/unfreeze waveform or trigger

Run/Stop

Save/Recall key 1/10

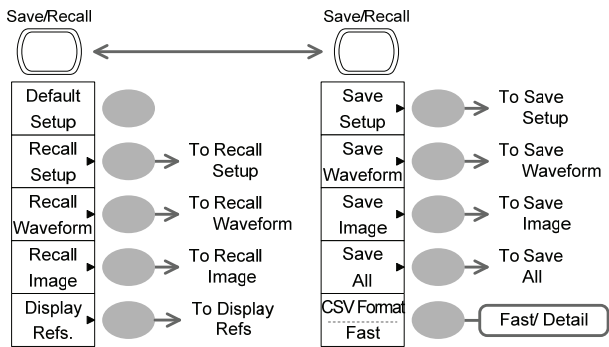


Switch to Save or Recall menu      Save/Recall ↩

Recall default setup      Default Setup

Change CSV format      CSV Format ↩

Save/Recall key 2/10

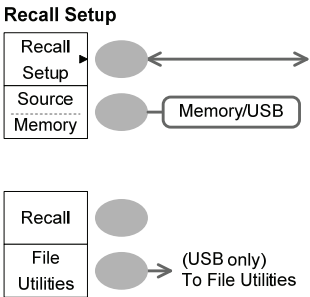

Select other menu

Recall Setup ↩

Select setup source

Source ↩ → VAR ○

Recall setup

Recall


Go to USB file utilities

File Utilities



## Save/Recall key 3/10

### Recall Waveform

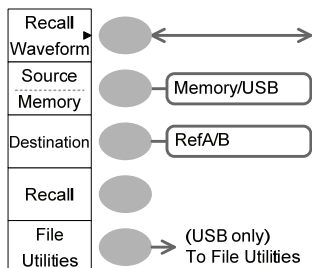

Select other menu

Recall Waveform

Select waveform source

Source → VAR

Select waveform destination

Destination → VAR

Recall waveform


Recall

Go to USB file utilities

File Utilities

## Save/Recall key 4/10

### Recall Image

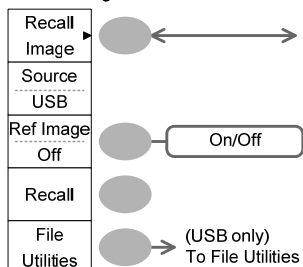

Select other menu

Recall Image

Turn reference image on/off

Ref image

Recall waveform


Recall

Go to USB file utilities

File Utilities

Save/Recall key 5/10

Display Refs.

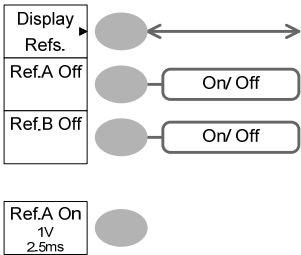

Select other menu

Display Refs.

Turn ref. waveform A on/off


Ref.A

Turn ref. waveform B on/off

Ref.B

Save/Recall key 6/10

Save Setup

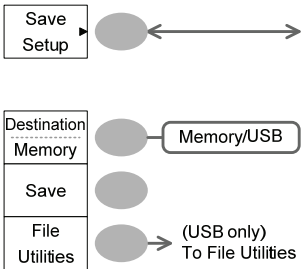

Select other menu

Save Setup

Select destination

Destination → VAR

Save setup


Save

Go to USB file utilities

File Utilities

## Save/Recall key 7/10

### Save Waveform

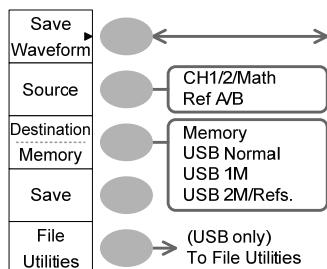

Select other menu

Save Waveform ↩

Select source

Source ↩ → VAR ⦿

Select destination

Destination ↩ → VAR ⦿

Save waveform


Save

Go to USB file utilities

File Utilities

## Save/Recall key 8/10

### Save Image

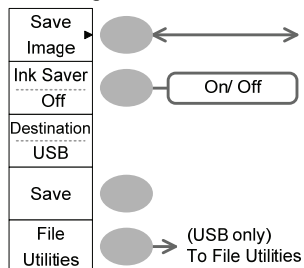

Select other menu

Save Image ↩

Turn on/off ink saver

Ink Saver ↩

Save image


Save

Go to USB file utilities

File Utilities

## Save/Recall key 9/10

### Save All

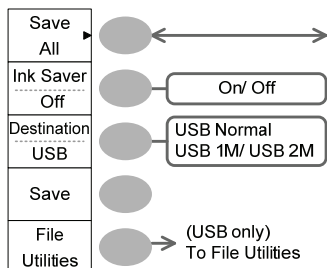

Select other menu

Save All ↩

Turn on/off ink saver

Ink Saver ↩

Select destination

Destination ↩ → VAR ○

Save all


Save

Go to USB file utilities

File Utilities

## Save/Recall key 10/10

### File Utilities

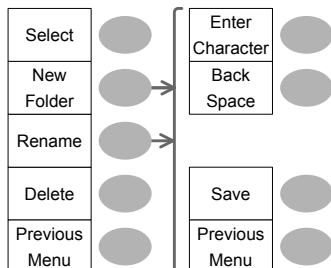

Select file/folder

VAR ○ → Select

Create or rename folder/file

New Folder/Rename

VAR ○ → Enter character / Backspace / Save / Previous menu


Delete folder/file

Delete

Go to previous menu

Previous menu


## Trigger key 1/6

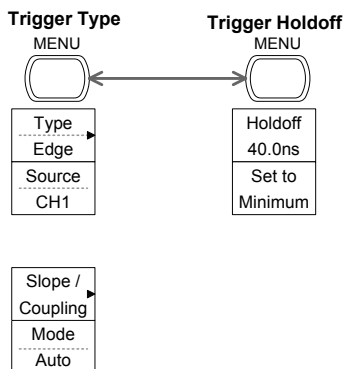

Select Trigger type or Trigger Holdoff menu

Type ↵

## Trigger key 2/6

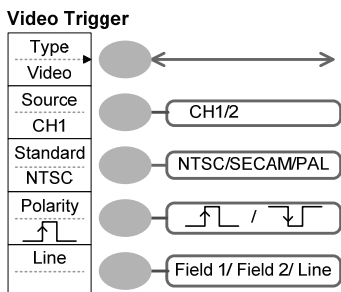

Select video trigger type

Type ↵

Select trigger source

Source ↵

Select video standard

Standard ↵

Select video polarity


Polarity ↵

Select video field/line

Line ↵ → VAR ⦿

Trigger key 3/6

Edge Trigger

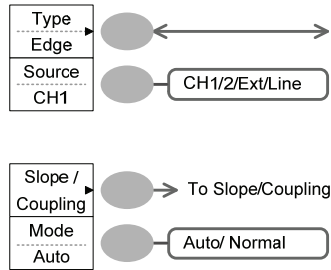

Select edge trigger type

Edge↵

Select trigger source

Source↵

Go to slope/coupling menu (page 39)


Slope/Coupling

Select trigger mode

Mode↵

Trigger key 4/6

Pulse Trigger

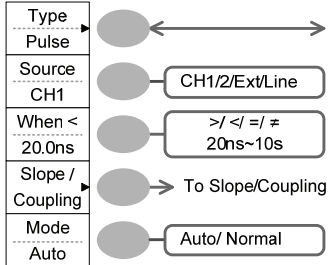

Select pulse trigger type

Type↵

Select trigger source

Source↵

Select pulse trigger condition and pulse width

When↵→VAR⊙

Go to slope/coupling menu (page 39)


Slope/Coupling

Select trigger mode

Mode↵

## Trigger key 5/6

### Coupling/Slope

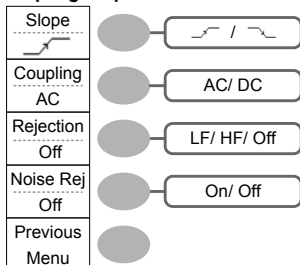

Select trigger slope type

Slope ↩

Select trigger coupling mode

Coupling ↩

Select frequency rejection

Rejection ↩

Turn noise rejection on/off


Noise Rej ↩

Go back to previous menu

Previous Menu

## Trigger key 6/6

### Trigger Holdoff




Select Holdoff time

VAR

Set to minimum Holdoff time

Set to Minimum ↩

## Utility key 1/11 (Utility #1)

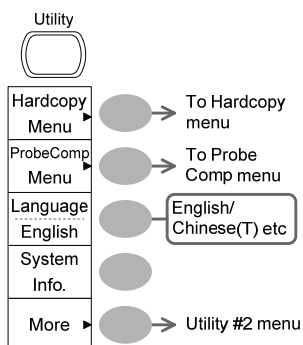

Go to hardcopy menu

Hardcopy

Go to probe compensation menu

ProbeComp

Select language

Language ↩


Show system information

System Info.

Go to the next Utility menu

More

## Utility 2/11 (Utility #2)

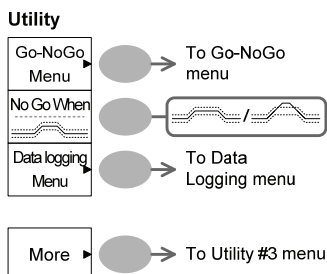

Go to the Go-NoGo menu

Go-NoGo

Set the NoGo conditions to inside  
/outside limits

No Go When ↩

Go to the Data Logging Menu

Data Logging


Go to the next Utility menu

More



## Utility key 3/11 (Utility #3)

### Calibration



Enter self calibration

Self CAL

Select USB port interface


USB Port ↵

Go to the first Utility menu

More

## Utility key 4/11 (Hardcopy -Save All)

### Hardcopy – Save All

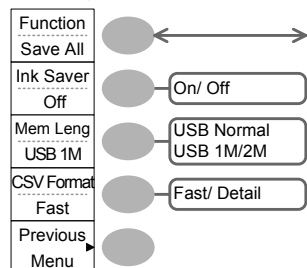

Select Hardcopy function

Function ↵

Turn on/off Ink saver

Ink Saver ↵

Set the memory length

Mem Leng ↵

Change CSV format


CSV Format ↵

Go to previous menu

Previous Menu ↵

## Utility key 5/11 (Hardcopy -Printer)

### Hardcopy – Printer

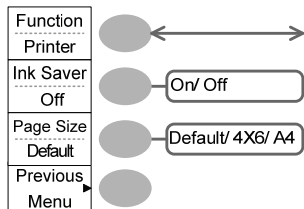

Select Hardcopy function

Function ↵

Turn on/off Ink saver

Ink Saver ↵

Set default page size


Page Size ↵

Go to previous menu

Previous Menu ↵

## Utility key 6/11 (Hardcopy -Save Image)

### Hardcopy – Save Image

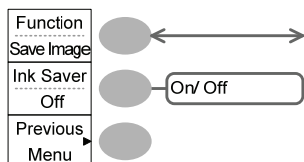

Select Hardcopy function

Function ↵

Turn on/off Inksaver


Ink Saver ↵

Go to previous menu

Previous Menu ↵

## Utility key 7/11 (Probe compensation)

### Probe compensation

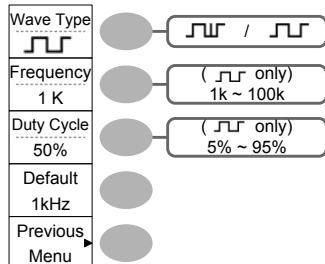

Select probe compensation signal

Wave Type 

Set frequency for square wave

Frequency → VAR 

Set duty cycle for square wave


Duty Cycle → VAR 

Go to previous menu

Previous Menu

## Utility key 8/11 (Go-NoGo)

### Edit

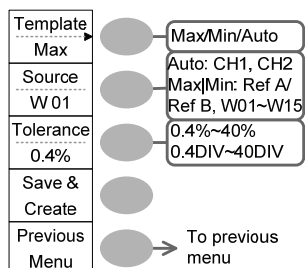

Switch between templates

Template 

Select the template source

Source 

Set the tolerance (% or Divisions)

Tolerance  → VAR 

Save the template

Save & Create

Go back to previous menu

Previous Menu

Utility key 9/11 (Data Logging 1/2)

**Data logging**

|               |   |                   |
|---------------|---|-------------------|
| Data logging  | ● | On/Off            |
| Off           |   |                   |
| Source        | ● | CH1/CH2           |
| CH1           |   |                   |
| Setup         | ● | To the Edit menu  |
| File          | ● | (USB only)        |
| Utilities     | ● | To File Utilities |
| Previous Menu | ● | To previous menu  |

Turn Data Logging On/Off

Data logging↵

Set the logging source

Source↵

Go to the Data Logging Edit menu

Setup

Go to the File Utilities menu

File Utilities

Go back to previous menu

Previous Menu

Utility key 10/11 (Data Logging 2/2)

**Edit**

|               |   |                  |
|---------------|---|------------------|
| Save          | ● | Waveform/Image   |
| Waveform      |   |                  |
| Interval      | ● | 2 secs~30 mins   |
| 2 secs        |   |                  |
| Duration      | ● | 5 mins~100 hrs   |
| 5 mins        |   |                  |
| Previous Menu | ● | To previous menu |

Save the logs as waveform data or as image files

Save↵

Set the logging interval

Interval→VAR ⌚

Set the duration of the record log

Duration→VAR ⌚

Go back to previous menu

Previous Menu

Utility key 11/11 (Self CAL Menu)

**Self Cal.**

|           |   |                            |
|-----------|---|----------------------------|
| Vertical▶ | ● | Start Vertical Calibration |
|-----------|---|----------------------------|

Start Vertical Calibration

Vertical

## Default Settings

Here are the factory installed panel settings which appear when pressing the Save/Recall key → *Default Setup*.



|             |                                                                                              |                                                                                            |
|-------------|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Acquisition | Mode: Normal                                                                                 |                                                                                            |
| Channel     | Scale: 2V/Div                                                                                | Invert: Off                                                                                |
|             | Coupling: DC                                                                                 | Probe attenuation voltage: x1                                                              |
|             | BW limit: Off                                                                                | Channel 1 & 2: On                                                                          |
| Cursor      | Source: CH1                                                                                  | Cursor: Off                                                                                |
| Display     | Type: Vectors                                                                                | Accumulate: Off                                                                            |
|             | Grid: Full  |                                                                                            |
| Horizontal  | Scale: 2.5us/Div                                                                             | Mode: Main Timebase                                                                        |
|             | H Pos Adj: Fine                                                                              | Hor Pos: 0                                                                                 |
| Math        | Type: + (Add)                                                                                | Position: 0.00 Div                                                                         |
|             | Unit/Div: 2V                                                                                 |                                                                                            |
| Measure     | Item: Vpp, Vavg, Frequency, Duty Cycle, Rise Time                                            |                                                                                            |
| Trigger     | Type: Edge                                                                                   | Source: Channel1                                                                           |
|             | Mode: Auto                                                                                   | Slope:  |
|             | Coupling: DC                                                                                 | Rejection: Off                                                                             |
|             | Noise Rejection: Off                                                                         |                                                                                            |
| Utility     | Hardcopy: SaveImage, InkSaver On                                                             | ProbeComp: Square wave, 1k, 50% duty cycle                                                 |
| Go-NoGo     | Go-NoGo: Off                                                                                 | Source: CH1                                                                                |
|             | When:     | Violating: Stop                                                                            |

(Continued)


|              |                   |                  |
|--------------|-------------------|------------------|
| Data Logging | Data logging: Off | Source: CH1      |
|              | Setup: Waveform   | Interval: 2 secs |
|              | Duration: 5 mins  |                  |

## Built-in Help

The Help key shows the contents of the built-in help support. When you press a function key, its descriptions appear in the display.



Applicable keys

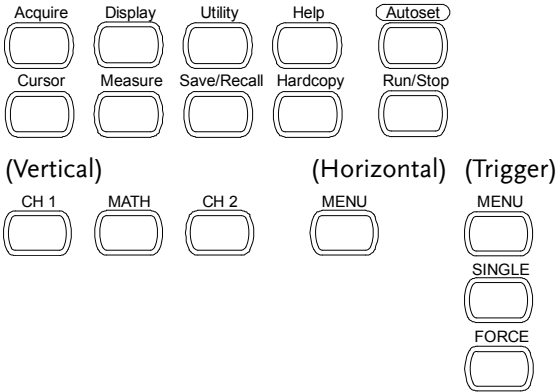

Procedure

1. Press the Help key. The display changes to the Help mode.
2. Press a functional key to access its help contents. (example: Acquire key)
3. Use the Variable knob to scroll the Help contents up and down.
4. Press the Help key again to exit the Help mode.



# M EASUREMENT

The Measurement chapter describes how to properly observe a signal using the oscilloscope's basic functions, and how to observe a signal in a detailed manner using some of the advanced functions such as:

Automatic measurements, cursor measurements, and math operations.

## Basic Measurements

This section describes the basic operations required in capturing and viewing an input signal. For more detailed operations, see the following chapters.


- Measurements → from page 47
- Configuration → from page 78

### Activating a channel


---

Activating a channel

To activate an input channel, press the Channel key, CH1 or CH2. The channel indicator appears at the left side of the display and the channel icon changes accordingly.



(Continued on next page)

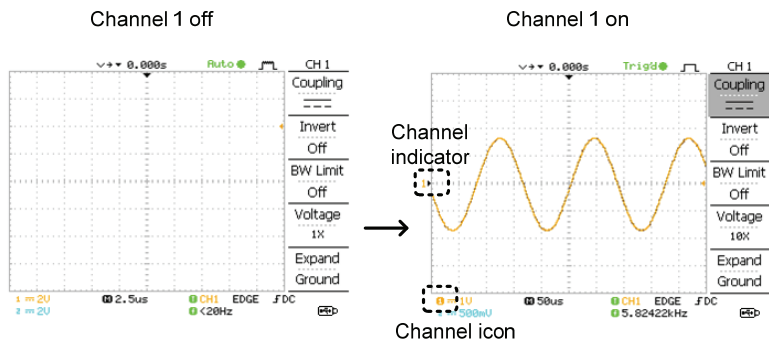

De-activating a channel

To de-activate the channel, press the Channel key twice (once if the channel menu is already selected).

## Using Autoset

Background

The Autoset function automatically configures the panel settings to the best viewing conditions, in the following way.

- Selecting the horizontal scale
- Positioning the waveform horizontally
- Selecting the vertical scale
- Positioning the waveform vertically
- Selecting the trigger source channel
- Activating the channels

Autoset can be configured into two types of modes, AC Priority Mode or Fit Screen Mode.

AC Priority mode will scale the waveform to the screen removing any DC component.

Fit Screen Mode will fit the waveform to the best scale, including any DC components (offset).




Procedure

1. Connect the input signal to the oscilloscope and press the Autoset key.




2. The waveform(s) appears in the center of the display.

Before Autoset

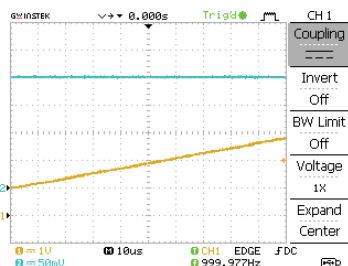

After Autoset

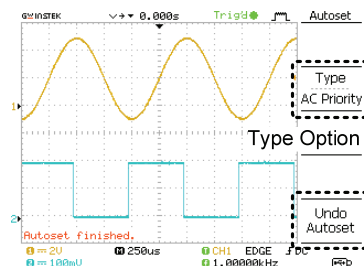

Undo option

Undoing the Autoset

To undo the Autoset, press *Undo* (available for a few seconds).

Undo




Adjusting the trigger level

If the waveform is still unstable, try adjusting the trigger level up or down by using the Trigger Level knob.




Change Modes

To change the type of mode, press *Type* (available for a few seconds). The Type icon will change to next type.



Type      Fit Screen, AC Priority

The next time the Autoset key is pressed, the new mode will be activated.

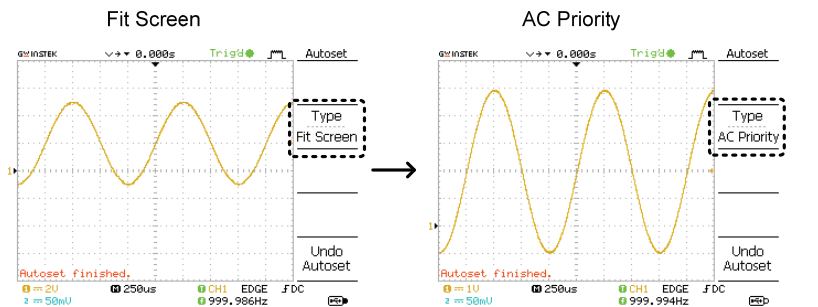

## Limitation

Autoset does not work in the following situation.

- Input signal frequency less than 2Hz
- Input signal amplitude less than 30mV


## Running and stopping the trigger

### Background

In the trigger Run mode, the oscilloscope constantly searches for a trigger condition and updates the signal onto the display when the condition is met.

In the trigger Stop mode, the oscilloscope stops triggering and thus the last acquired waveforms stay in the display. The trigger icon at the top of the display changes into Stop mode.

Pressing the Trigger Run/Stop key switches between the Run and Stop mode.

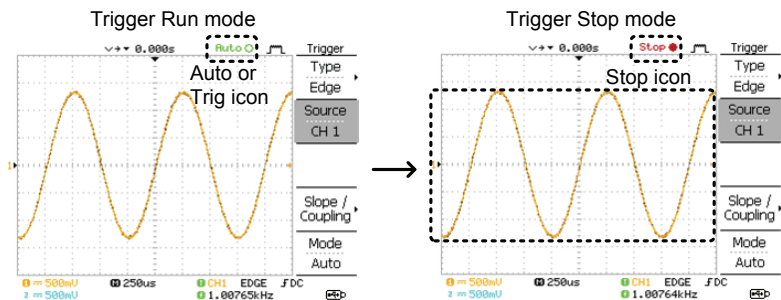

## Waveform operation

Waveforms can be moved or scaled in both the Run and Stop mode. For details, see page 85 (Horizontal position/scale) and page 91 (Vertical position/scale).

## Changing the horizontal position and scale


For more detailed configurations, see page 85.

## Setting the horizontal position

The horizontal position knob moves the waveform left or right.



The position indicator moves along with the waveform and the distance from the center point is displayed as the offset in the upper side of the display.

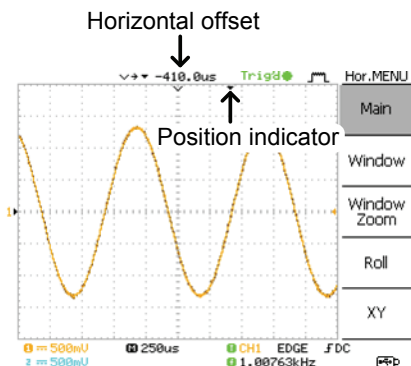

## Selecting the horizontal scale


To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

TIME/DIV



Range

1ns/Div ~ 10s/Div, 1-2.5-5 increment

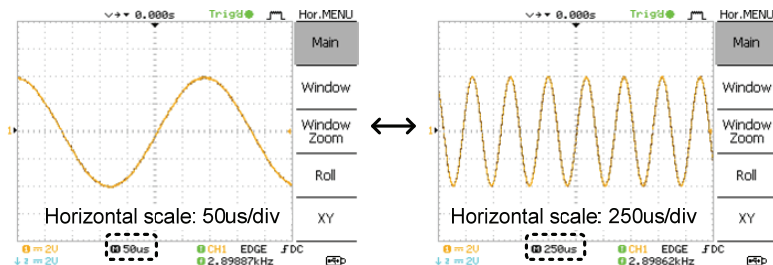

## Changing the vertical position and scale

For more detailed configuration, see page 91.

Set vertical position

To move the waveform up or down, turn the vertical position knob for each channel.



As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.

Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.

Select vertical scale

To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).



Range 2mV/Div ~ 10V/Div, 1-2-5 increments

The vertical scale indicator for each channel on the bottom left of the display changes accordingly.

## Using the probe compensation signal

### Background

This section introduces how to use the probe compensation signal for general usage, in case the DUT signal is not available or to get a second signal for comparison. For probe compensation details, see page 135.



Note: The frequency accuracy and duty factor are not guaranteed. Therefore the signal should not be used for reference purposes.

### Waveform type




Square waveform used for probe compensation. 1k ~ 100kHz, 5% ~ 95%.



Demonstration signal for showing the effects of peak detection. See page 78 for peak detection mode details.

### View the probe compensation waveform


1. Connect the probe between the compensation signal output and Channel input.

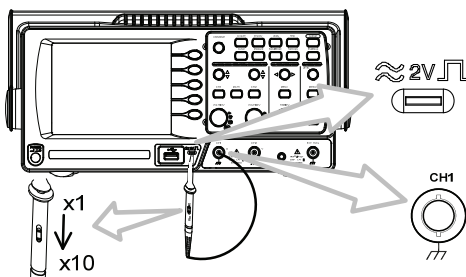


2. Press the Utility key.




3. Press *ProbeComp*.



4. Press Wave type repeatedly to select the wave type.



5. (For  only) To change the frequency, press *Frequency* and use the Variable knob.




VARIABLE



Range 1kHz ~ 100kHz

6. (For  only) To change the duty cycle, press *Duty Cycle* and use the Variable knob.



VARIABLE



Range 5% ~ 95%

Probe  
compensation

For probe compensation details, see page 135.

# Automatic Measurements

The automatic measurement function measures input signal attributes and updates them in the display. Up to 5 automatic measurement items can be updated at any one time on the side menus. All automatic measurement types can be displayed on screen if necessary.

## Measurement items

| Overview                  | Voltage type | Time type                                                                                                                                                   | Delay type                                                                            |
|---------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|                           | Vpp          |  Frequency                                                                 |  FRR |
|                           | Vmax         |  Period                                                                    |  FRF |
|                           | Vmin         |  RiseTime                                                                  |  FFR |
|                           | Vamp         |  FallTime                                                                  |  FFF |
|                           | Vhi          |  +Width                                                                    |  LRR |
|                           | Vlo          |  -Width                                                                    |  LRF |
|                           | Vavg         |  Dutycycle                                                                 |  LFR |
|                           | Vrms         |                                                                                                                                                             |  LFF |
|                           | ROVShoot     |                                                                                                                                                             |                                                                                       |
|                           | FOVShoot     |                                                                                                                                                             |                                                                                       |
|                           | RPREShoot    |                                                                                                                                                             |                                                                                       |
|                           | FPRESShoot   |                                                                                                                                                             |                                                                                       |
| Voltage measurement items | Vpp          |  Difference between positive and negative peak voltage<br>(=Vmax – Vmin) |                                                                                       |
|                           | Vmax         |  Positive peak voltage.                                                  |                                                                                       |
|                           | Vmin         |  Negative peak voltage.                                                  |                                                                                       |
|                           | Vamp         |  Difference between global high and global low voltage<br>(=Vhi – Vlo)   |                                                                                       |
|                           | Vhi          |  Global high voltage.                                                    |                                                                                       |

|                         |            |                                                                                     |                                                                                                 |
|-------------------------|------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
|                         | Vlo        |    | Global low voltage.                                                                             |
|                         | Vavg       |    | Averaged voltage of the first cycle.                                                            |
|                         | Vrms       |    | RMS (root mean square) voltage.                                                                 |
|                         | ROVShoot   |    | Rise overshoot voltage.                                                                         |
|                         | FOVShoot   |    | Fall overshoot voltage.                                                                         |
|                         | RPREShoot  |    | Rise preshoot voltage.                                                                          |
|                         | FPREShoot  |    | Fall preshoot voltage.                                                                          |
| Time measurement items  | Freq       |    | Frequency of the waveform.                                                                      |
|                         | Period     |    | Waveform cycle time ( $=1/\text{Freq}$ ).                                                       |
|                         | Risetime   |    | Rising time of the pulse ( $\sim 90\%$ ).                                                       |
|                         | Falltime   |    | Falling time of the pulse ( $\sim 10\%$ ).                                                      |
|                         | +Width     |    | Positive pulse width.                                                                           |
|                         | -Width     |   | Negative pulse width.                                                                           |
|                         | Duty Cycle |  | Ratio of signal pulse compared with whole cycle $=100 \times (\text{Pulse Width}/\text{Cycle})$ |
| Delay measurement items | FRR        |  | Time between:<br>Source 1 first rising edge and<br>Source 2 first rising edge                   |



|     |                                                                                   |                                                                                 |
|-----|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| FRF |  | Time between:<br>Source 1 first rising edge and<br>Source 2 first falling edge  |
| FFR |  | Time between:<br>Source 1 first falling edge and<br>Source 2 first rising edge  |
| FFF |  | Time between:<br>Source 1 first falling edge and<br>Source 2 first falling edge |
| LRR |  | Time between:<br>Source 1 first rising edge and<br>Source 2 last rising edge    |
| LRF |  | Time between:<br>Source 1 first rising edge and<br>Source 2 last falling edge   |
| LFR |  | Time between:<br>Source 1 first falling edge and<br>Source 2 last rising edge   |
| LFF |  | Time between:<br>Source 1 first falling edge and<br>Source 2 last falling edge  |

## Automatic measurement gating


**Background** Automatic measurements can be restricted to a specific area (gating). When cursors are turned on, the area between the cursors is used for automatic measurements. When cursors are turned off, measurements are derived from all the points that are displayed on screen.

**Turn gating on** 1. Turn on cursors to enable gated automatic measurements. page 61

2. Press the Measure key.



3. The measurement results appear on the menu bar, constantly updated. All measurements are derived from the cursor positions. See *Automatically measuring the input signals* for more details (page 58).

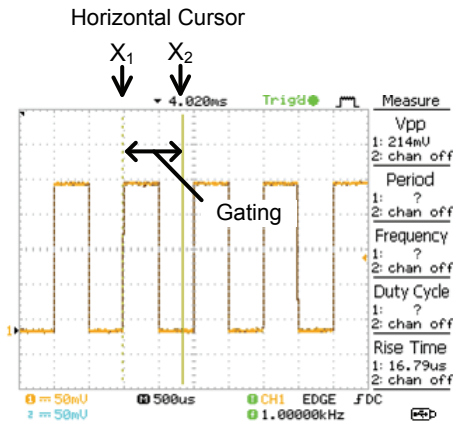

Turn gating off

4. Turn off cursors to turn off gated automatic measurements.

page 61


**Automatically measuring the input signals**

Viewing the measurement result

1. Press the Measure key.



2. The measurement results appear on the menu bar, constantly updated. 5 measurement slots (F1 to F5) can be customized.

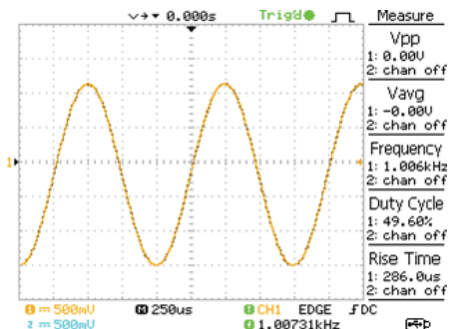


Editing a measurement item

- Press the corresponding menu key ( $F1 \sim F5$ ) to select the measurement slot to be edited.

Voltage  
-----  
Vpp



- The editing menu appears

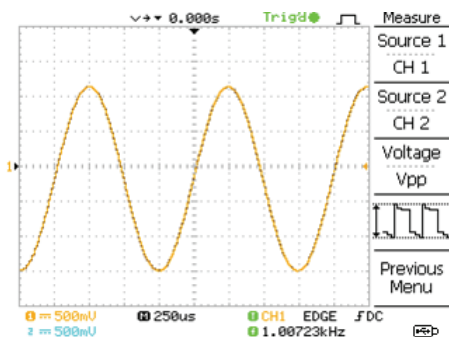

Change measurement item

- Use the Variable knob to select a different measurement item.

VARIABLE



Change measurement source

- Press *Source 1* repeatedly to change Source1 from CH1 to CH2 or MATH.

Source 1  
-----  
CH1



Range      CH1, 2, Math

7. Press *Source 2* repeatedly to change the channel for Source2.

Source 2  
CH2



Range CH1, 2, Math


View all  
measurements

8. Press F3 to view all measurement items.

Voltage  
Vpp



9. All the measurements appear in the center of the screen.

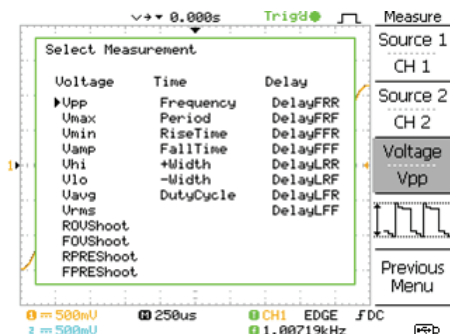

10. Press F3 again to return.



Note: All the editing operations can still be performed when viewing all the measurement items.

11. Press *Previous Menu* to confirm the item selection and to go back to the measurement results view.



Previous  
Menu



# Cursor Measurements

Cursor lines, horizontal or vertical, show the precise position of the input waveforms or the math operation results. The horizontal cursors can track time, voltage/current\* and frequency, whilst the vertical cursors can track voltage/current\*. All measurements are updated in real-time. \*probe type dependant (page 94).

## Using the horizontal cursors

|           |                                                                      |                                                                                   |
|-----------|----------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Procedure | 1. Press the Cursor key. The cursors appear in the display.          |  |
|           | 2. Press X↔Y to select the horizontal (X1&X2) cursor.                |  |
|           | 3. Press <i>Source</i> repeatedly to select the source channel.      |  |
|           | Range      CH1, 2, MATH                                              |                                                                                   |
|           | 4. The cursor measurement results will appear in the menu, F2 to F4. |                                                                                   |

|            |       |                                                       |
|------------|-------|-------------------------------------------------------|
| Parameters | X1    | Time position of the left cursor. (relative to zero)  |
|            | X2    | Time position of the right cursor. (relative to zero) |
|            | X1X2  | The difference between the X1 and X2.                 |
|            | Δ: us | The time difference between X1 and X2.                |
|            | f: Hz | The time difference converted to frequency.           |
|            | V/A   | The voltage/current difference from X1 and X2.        |

M1:dB    Position of the left cursor in dB.


M2:dB    Position of the right cursor in dB.

Δ: dB    The dB difference between M1 and M2.


Div:    The frequency per division.

Moving the horizontal cursors


To move the left cursor, press X1 and then use the Variable knob.



To move the right cursor, press X2 and then use the Variable knob.



To move both cursors at once, press X1X2 and then use the Variable knob.



Remove cursors

Press Cursor to remove the onscreen cursors.




Using the vertical cursors

Procedure


1. Press the Cursor key.



2. Press X↔Y to select the vertical (Y1&Y2) cursor.



3. Press Source repeatedly to select the source channel.



Range    CH1, 2, MATH

4. The cursor measurement results will appear in the menu.

Parameters

Y1    Voltage level of the upper cursor

Y2    Voltage level of the lower cursor

|                             |                                                                          |                                                                                   |                                                                                   |
|-----------------------------|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|                             | Y1Y2                                                                     | The difference between the upper and lower cursor                                 |                                                                                   |
|                             | V/A                                                                      | The voltage/current difference (Y1-Y2).                                           |                                                                                   |
| Moving the vertical cursors | To move the upper cursor, press Y1 and then use the Variable knob.       | Y1<br>123.4mV                                                                     |  |
|                             | To move the lower cursor, press Y2 and then use the Variable knob.       | Y2<br>12.9mV                                                                      |  |
|                             | To move both cursors at once, press Y1Y2 and then use the Variable knob. | Y1Y2<br>10.5mV                                                                    |  |
| Remove cursors              | Press Cursor to remove the onscreen cursors.                             |  |                                                                                   |

## Math Operations

The Math operations can add, subtract, multiply or perform FFT/FFT RMS on the input waveforms. The resulted waveform can be measured using the cursors, and saved or recalled just like normal input signals.

### Overview


|                    |                                                                                                                               |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Addition (+)       | Adds the amplitude of CH1 & CH2 signals.                                                                                      |
| Subtraction (-)    | Extracts the amplitude difference between CH1 & CH2.                                                                          |
| Multiplication (×) | Multiplies CH1 and CH2.                                                                                                       |
| FFT                | Performs a FFT calculation on a signal. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman. |

|                        |                                                                                                                                                                                                                 |                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| FFT RMS                | Performs a FFT RMS calculation on a signal. RMS is similar to FFT, however the amplitude is calculated as RMS and not dB. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman. |                                                                           |
| Hanning FFT window     | Frequency resolution                                                                                                                                                                                            | Good                                                                      |
|                        | Amplitude resolution                                                                                                                                                                                            | Not good                                                                  |
|                        | Suitable for....                                                                                                                                                                                                | Frequency measurement on periodic waveforms                               |
| Flattop FFT window     | Frequency resolution                                                                                                                                                                                            | Not good                                                                  |
|                        | Amplitude resolution                                                                                                                                                                                            | Good                                                                      |
|                        | Suitable for....                                                                                                                                                                                                | Amplitude measurement on periodic waveforms                               |
| Rectangular FFT window | Frequency resolution                                                                                                                                                                                            | Very good                                                                 |
|                        | Amplitude resolution                                                                                                                                                                                            | Bad                                                                       |
|                        | Suitable for....                                                                                                                                                                                                | Single-shot phenomenon (this mode is the same as having no window at all) |
| Blackman FFT window    | Frequency resolution                                                                                                                                                                                            | Bad                                                                       |
|                        | Amplitude resolution                                                                                                                                                                                            | Very good                                                                 |
|                        | Suitable for....                                                                                                                                                                                                | Amplitude measurement on periodic waveforms                               |

Adding, subtracting or multiplying signals

Procedure

1. Activate both CH1 and CH2.
2. Press the Math key.

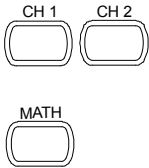



- Press *Operation* repeatedly to select addition (+), subtraction (-) or multiplication (×).

Operation  
CH1+CH2



- The math measurement result appears in the display.

Unit/Div  
2V



- To move the math result vertically, use the Variable knob. The position will be displayed in *Position*.

VARIABLE



Position  
0.00 Div



- To clear the math result from the display, press the Math key again.



## Using the FFT function

### Procedure

- Press the Math key.



- Press *Operation* repeatedly to select FFT or FFT RMS.

Operation  
FFT



- Press *Source* repeatedly to select the source channel.

Source  
CH1



- Press *Window* repeatedly to select the FFT window type.

Window  
Hanning



5. The FFT result appears. The horizontal scale changes from time to frequency, and the vertical scale from voltage to dB or RMS.

6. To move the FFT waveform vertically, press *Vertical* repeatedly until Div is selected. Use the Variable knob to change the vertical scale.

Vertical  
2V  
0.00 Div

VARIABLE



Range            -12.00 Div ~ +12.00 Div

7. To select the vertical scale of an *FFT waveform*, press *Vertical* repeatedly until dB is selected. Use the Variable knob to change the vertical scale.

Vertical  
1 dB  
0.00 Div

VARIABLE



Range            1, 2, 5, 10, 20 dB/Div

8. To select the vertical scale of an *FFT rms waveform*, use the VOLTS/DIV knob to change the vertical scale. The scale will be shown in the *Vertical* soft-key.

VOLTS/DIV



Range            Volts/Div

9. To zoom in on the FFT/FFT rms waveform, press *Zoom* repeatedly until X is selected. Use the Variable knob to change the Zoom level.


Zoom  
1X  
0.0000Hz

VARIABLE



Range            1/2/5/10/20X

10. To move the FFT/FFT rms waveform horizontally, press *Zoom* repeatedly until Hz is selected. Use the Variable knob to change the horizontal position.



Range            0~50.000MHz

11. To clear the FFT result from the display, press the Math key again.



# Go No-Go Testing



## Overview

**Background**            Go-NoGo testing checks if a waveform conforms to a user-specified maximum and minimum boundary (template). The testing can be set to stop or continue each time the template has or has not been violated by the input waveform.

| Settings | Item                                                                                               | Default     | Details |
|----------|----------------------------------------------------------------------------------------------------|-------------|---------|
|          | NoGo criteria: When inside or outside the boundary                                                 | Inside      | Page 68 |
|          | Source                                                                                             | Channel 1   | Page 68 |
|          | Test continue or stop when NoGo occurs                                                             | Stop        | Page 69 |
|          | Boundary (template) – selects the minimum and maximum boundaries (template) from a single waveform | Auto (0.4%) | Page 69 |
|          | Run Tests                                                                                          |             | Page 73 |


Edit: NoGo When

---

|           |                                                                                   |                                                                                   |
|-----------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Procedure | 1. Press the Utility key.                                                         |  |
|           | 2. Press the <i>More</i> key.                                                     |  |
|           | 3. Press <i>No Go When</i> repeatedly to select the NoGo conditions.              |  |
|           |  | NoGo when the waveform is inside the boundary (template)                          |
|           |  | NoGo when the waveform is outside of the boundary (template)                      |


Edit: Source

---

|           |                                                                              |                                                                                     |
|-----------|------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Procedure | 1. Press the Utility key.                                                    |    |
|           | 2. Press the <i>More</i> key.                                                |  |
|           | 3. Press the <i>Go-NoGo Menu</i> key.                                        |  |
|           | 4. Press <i>Source</i> repeatedly to select the source channel (CH1 or CH2). |  |

Edit: NoGo Violation Conditions

---

|           |                                                                     |                                                                                   |
|-----------|---------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Procedure | 1. Press the Utility key.                                           |  |
|           | 2. Press the <i>More</i> key.                                       |  |
|           | 3. Press the <i>Go-NoGo Menu</i> key.                               |  |
|           | 4. Press <i>Violating</i> repeatedly to select the NoGo conditions. |  |
|           | Stop                                                                | Stops the test when the NoGo conditions have been met.                            |
|           | Continue                                                            | The tests continue even when the NoGo conditions have been met.                   |

Edit: Template (boundary)

---

|            |                                                                                                             |                                                                                                                                                                                                                                                                                                         |
|------------|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Background | The NoGo template sets the upper and lower amplitude boundary. Two methods are available: Min/Max and Auto. |                                                                                                                                                                                                                                                                                                         |
|            | Min/Max                                                                                                     | Selects the upper boundary (Max) and lower boundary (Min) as separate waveforms, from the internal memory. The upper boundary is saved to Ref A, the lower boundary is saved to Ref. B.<br><br>Advantage: The template shape and distance (allowance) between the source signal are fully customizable. |

|      |                                                                                                                                                                                                                                                                                                                                                                                 |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p>Disadvantage: The waveforms (templates) have to be stored internally prior to this selection.</p>                                                                                                                                                                                                                                                                            |
| Auto | <p>Creates the upper and lower boundary (template) from the source signal, not from an internally stored waveform.</p> <p>Advantage: No need to store the waveforms prior to this selection.</p> <p>Disadvantage: The template shape is proportional to the source signal. The distance (allowance) between the source signal and the upper and lower template is the same.</p> |


Max/Mix

1. The template is based on the source signal. Ensure the source signal appears on the display.

2. Press the Utility key.



3. Press the *More* key.



4. Press the *Go-NoGo Menu* key.




5. Press the *Template Edit* key.



6. Press *Template* repeatedly to select the upper (Max) or lower (Min) boundaries.



7. Press *Source* and use the Variable knob to select the waveform template.




VARIABLE



Max Waveform A: Ref A, W01~W15

Min Waveform B: Ref B, W01~W15

8. Press *Position* and use the Variable knob to set the waveform amplitude.





VARIABLE



9. Repeat steps 5-7 for the other template setting (Max or Min).

10. When both Max and Min templates have been configured, press *Save & Create* to save the templates.

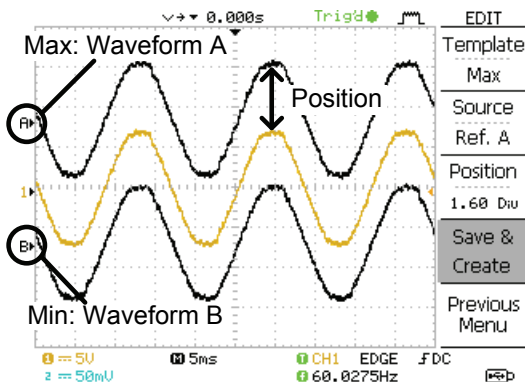

Auto

1. The template is based on the source signal.  
Ensure the source signal appears on the display.


2. Press the Utility key.




3. Press the *More* key.




4. Press the *Go-NoGo Menu* key.




5. Press the *Template Edit* key.



6. Press *Template* repeatedly to select the Auto template.



7. Press *Source* and use the Variable knob to select the template source.




VARIABLE



Source CH1, CH2

8. Press *Tolerance* repeatedly to choose the tolerance units, % or Div. Use the Variable knob to set the tolerance. The tolerance is for both the horizontal and vertical axis.



VARIABLE




% 0.4% ~ 40.0%



Div 0.04 Div ~ 4.0 Div

- When the Auto template has been configured, press *Save & Create* to save the template.

Save &  
Create

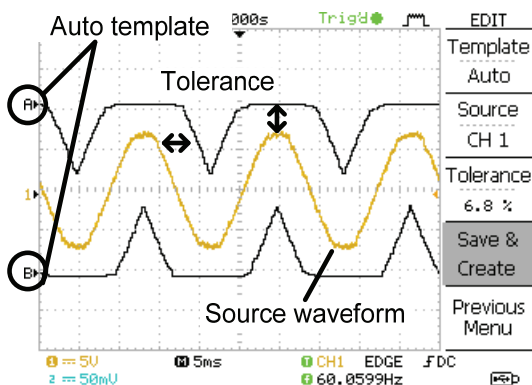


## Run Go-NoGo Tests

Procedure


- Press the Utility key.



- Press the *More* key.




- Press the *Go-NoGo Menu* key.




Ensure the source signal and boundary templates appear on the screen.

4. Press *Go-NoGo*. The test starts and stops according to the conditions set on page 68, 69. To stop the test that has already started, press *Go-NoGo* again.



5. The test results appear in the Ratio soft-key. The numerator denotes the total number of failed tests. The denominator denotes the total number of tests.



Numerator      Number of “failed” tests.  
 Denominator    Total number of tests.

## Data Logging

### Overview

---

#### Background

The Data logging function allows you to log data or a screen image over timed intervals for up to 100 hours to a USB flash drive.

The data or images are stored to a USB flash drive in a directory named LogXXXX. LogXXXX is incremented each time the data logging function is used.

The files saved in the LogXXXX directory are named DSXXXX.CSV, or DSXXXX.BMP for data or image files, respectively. At each timed interval data or an image file is saved and the file number incremented. For example, DS0000 is the first logged data, DS0001 is the second and so on.

## Edit: Source

---

### Procedure

1. Press the Utility key.




2. Press the *More* key.



3. Press the *Data logging Menu* key.



4. Press *Source* repeatedly to select the source channel (CH1 or CH2).



## Edit: Setup Parameters

---

### Background


The logging function must set the type of data that will be logged (waveform/image), the capture interval time and the duration of the data logging.

### Procedure

1. Press the Utility key.



2. Press the *More* key.



3. Press the *Data logging Menu* key.




4. Press the *Setup* key.



5. Press *Save* repeatedly to log data or screen images.



6. Press *Interval* and use the Variable knob to select the interval time.




VARIABLE



|          |                                    |
|----------|------------------------------------|
| Interval | 2 secs~ 2min (duration = 5 min)    |
| time     | 2 secs~ 5 min (duration 5~ 30 min) |
|          | 2 secs~ 30 min (duration 30+ min)  |

7. Press *Duration* and use the Variable knob to set the duration time.




VARIABLE



Duration     5 mins ~ 100 hours

8. Press Previous menu to return to the Data logging menu. Data logging is now ready to begin.




## Run Data logging

---

**Background**      Ensure the data source (page 75) and data logging setup has been set (page 75).

**Procedure**

1. Insert a USB flash drive into the USB front panel port.



2. Press the Utility key.



3. Press the *More* key.



4. Press the *Data logging Menu* key.



5. Press *Data logging* to turn data logging On. Data/image files start logging to the USB flash drive automatically. To stop the Data logging, press the *Data logging* key again.



# CONFIGURATION

The Configuration chapter describes how to configure panel settings to make measurements and observations suited to the application needs.

## Acquisition

The acquisition process samples the analog input signals and converts them into digital format for internal processing. You may select the normal, average, or peak detect acquisition mode.

### Selecting the acquisition mode

|             |                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                 |        |                                                                                   |         |                                                                                     |             |
|-------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------|-------------|
| Procedure   | 1. Press the Acquire key.                                                                      |                                                                                                                                                                                                                                                                                                |        |                                                                                   |         |                                                                                     |             |
|             | 2. Select the acquisition mode between <i>Normal</i> , <i>Average</i> and <i>Peak Detect</i> . | <table><tr><td>Normal</td><td></td></tr><tr><td>Average</td><td></td></tr><tr><td>Peak Detect</td><td></td></tr></table> | Normal |  | Average |  | Peak Detect |
| Normal      |               |                                                                                                                                                                                                                                                                                                                                                                                 |        |                                                                                   |         |                                                                                     |             |
| Average     |             |                                                                                                                                                                                                                                                                                                                                                                                 |        |                                                                                   |         |                                                                                     |             |
| Peak Detect |             |                                                                                                                                                                                                                                                                                                                                                                                 |        |                                                                                   |         |                                                                                     |             |
| Range       | Normal                                                                                         | All of the acquired data is used to draw the waveform.                                                                                                                                                                                                                                                                                                                          |        |                                                                                   |         |                                                                                     |             |

|             |                                                                                                                                                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Average     | Multiple data is averaged to form a waveform. This mode is useful for drawing a noise-free waveform. To select the number, press <i>Average</i> repeatedly.<br><br>Average number: 2, 4, 8, 16, 32, 64, 128, 256       |
| Peak detect | To activate the Peak detect mode, press <i>Peak-Detect</i> . Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in a signal. |

Peak detect effect using the probe comp. waveform

1. One of the probe compensation waveforms can demonstrate the peak detection mode. Connect the probe to the probe compensation output.



2. Press the Utility key.



3. Press *ProbeComp*.



4. Press *Wave Type* and select the  $\square\sqcap$  waveform.



5. Press the Autoset key. The oscilloscope positions the waveform in the center of the display.




6. Press the Acquire key.



7. Press *Normal*.




8. Press *Peak-Detect* and see that a spike noise is captured.



Example

The peak detect mode reveals the occasional glitch.

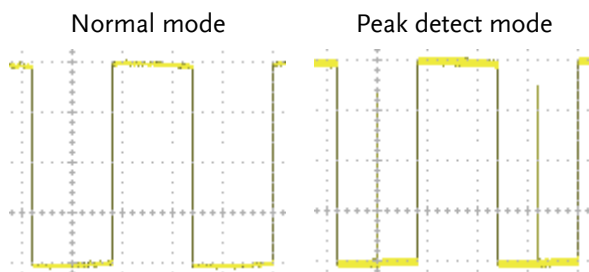

## Selecting Delay mode


Background

When delay time is ON, the displayed output is delayed for a defined amount of time from the trigger point. Using the delay function is useful for observing an area of the waveform that occurs some time after the trigger point.

Delay On


With Delay On the expansion point and trigger point become separated by the amount of delay time. As the delay time is increased the trigger point moves left from the expansion point. When the horizontal scale is adjusted, the waveform expands from the expansion point, not the trigger point.



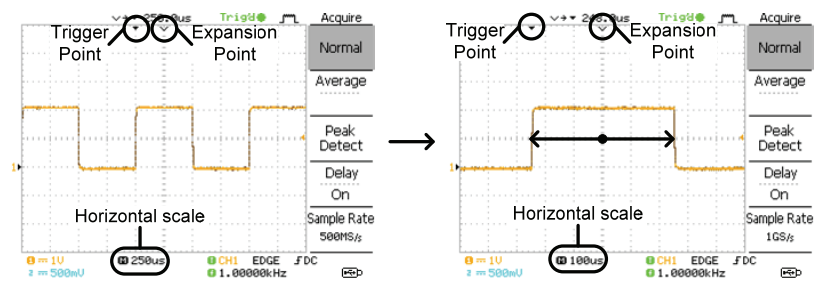

**Delay Off**

With Delay Off the expansion point and trigger point are always in the same position. Thus when the horizontal scale is adjusted, the waveform expands from the trigger point.

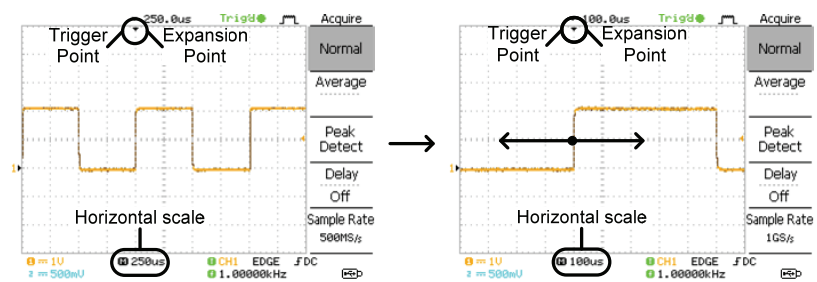


## Procedure

1. Press the Acquire key.



2. Press *Delay On/Off* to toggle Delay On/Off.



3. Use the Horizontal Position knob to increase or decrease the delay time when Delay is set to On.



4. Adjust the horizontal scale to zoom into the waveform.



## Real time vs Equivalent time sampling mode


---

|                          |                                                                                                                                                                                                                                                                                          |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Background               | The oscilloscope automatically switches between two sampling modes, Real-time and Equivalent-time, according to the number of active channels and sampling rate.                                                                                                                         |
| Real-time sampling       | Once sampled data is used to reconstruct a single waveform. Short-time events might get lost if the sampling rate gets too high. This mode is used when the sampling rate is relatively low (1GSa/s or lower).                                                                           |
| Equivalent-time sampling | Multiple numbers of sampled data are accumulated to reconstruct a single waveform. ETS restores more waveform detail but takes longer to update the waveform. This mode is used when the sampling rate becomes higher than 1GSa/s. The maximum equivalent-time sampling rate is 25GSa/s. |


# Display

The Display section describes how to configure the display settings: drawing type, waveform accumulation, contrast adjustment, and grid settings.


## Selecting vector or dot drawing

|           |                                                                 |                                                                                   |
|-----------|-----------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Procedure | 1. Press the Display key.                                       |  |
|           | 2. Press <i>Type</i> repeatedly to select the waveform drawing. |  |
| Types     | Dots                                                            | Only the sampled dots are displayed.                                              |
|           | Vectors                                                         | The sampled dots are connected by lines.                                          |

## Accumulating the waveform

|            |                                                                                                                                            |                                                                                     |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Background | Accumulation preserves the old waveform drawings and overwrites new waveforms on top of it. It is useful for observing waveform variation. |                                                                                     |
| Procedure  | 1. Press the Display key.                                                                                                                  |  |
|            | 2. Press <i>Accumulate</i> to turn on the waveform accumulation.                                                                           |  |
|            | 3. To clear the accumulation and start it over (refresh), press <i>Refresh</i> .                                                           |  |

Example

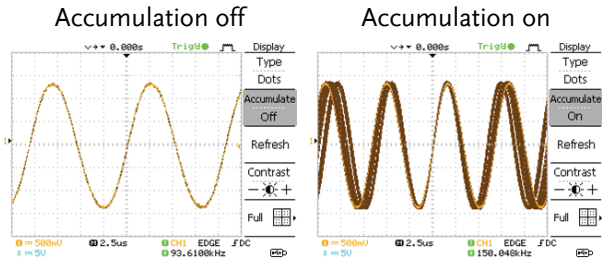


Adjusting the display contrast

Procedure

1. Press the Display key.



2. Press *Contrast*.



3. Turn the Variable knob left to lower the contrast (dark display) or right to raise the contrast (bright display).




Selecting the display grid

Procedure

1. Press the Display key.



2. Press the grid icon repeatedly to select the grid.



Parameters



Shows the full grid.



Shows the outer frame and X/Y axis.



Shows only the outer frame.



## Horizontal View

The Horizontal view section describes how to configure the horizontal scale, position, waveform update mode, window zoom, and X-Y mode.

### Moving the waveform position horizontally

#### Procedure

The horizontal position knob moves the waveform left or right. The position indicator at the top of the display shows the center and current position.

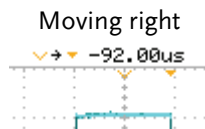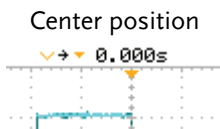

### Selecting the horizontal scale

#### Select horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

TIME/DIV





Range 1ns/Div ~ 50s/Div, 1-2.5-5-10 increment

The timebase indicator at the bottom of the display updates the current horizontal scale.



Selecting the waveform update mode

|            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Background | The display update mode is switched automatically or manually according to the horizontal scale.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Main mode  | <p>Updates the whole displayed waveform at once. The main mode is automatically selected when the horizontal scale (timebase) is fast.</p> <p>Horizontal scale    <math>\leq 100\text{ms}/\text{div}</math></p> <p>Trigger              All modes available</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Roll mode  | <p>Updates and moves the waveform gradually from the right side of the display to the left. The Roll mode is automatically selected when the horizontal scale (timebase) is 50ms or slower.</p> <p>When in the Roll mode, an indicator appears at the bottom of the display. When in roll mode the record length is 2M (1 channel) or 1M (2 channel).</p> <div><div><p>Main mode</p><p>M 100us</p></div><div><p>Roll mode</p><p>M 50ms ROLL</p></div></div> <p>Timebase            <math>\geq 50\text{ms}/\text{div}</math> (<math>\leq 1.25\text{MS}/\text{s}</math>)</p> <p>Trigger              Auto mode only</p> |

Selecting the Roll mode manually

1. Press the Horizontal menu



2. Press *Roll*. The horizontal scale automatically becomes 50ms/div and the waveform starts scrolling from the right side of the display (If the oscilloscope is already in the Roll mode, there will be no change).



## Zooming the waveform horizontally


Procedure/ range 1. Press the Horizontal Menu key.



2. Press *Window*.




3. Use the horizontal position knob to move the zoom range sideways, and TIME/DIV knob to change the zoom range width.



The width of the bar in the middle of the display is the actual zoomed area.


Zoom range 1ns ~ 25s

4. Press *Window Zoom*. The specified range gets zoomed.




### Example

#### Setting the zoom width

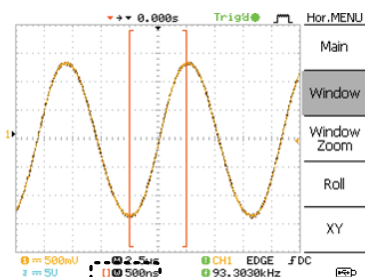

Zoom width

#### Zooming in

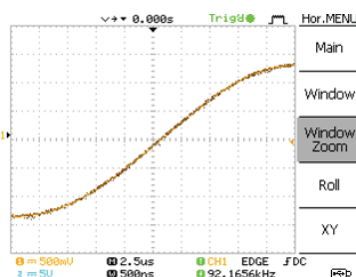

Viewing waveforms in the X-Y mode

**Background** The X-Y mode compares the voltage of Channel 1 and Channel 2 waveforms in a single display. This mode is useful for observing the phase relationship between the two waveforms.

- Procedure

1. Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis).

CH1

X

1MΩ // 15pF

300V CAT II

MAX: 300Vpk

CH2

Y

2. Make sure both Channel 1 and 2 are activated.

CH 1

CH 2

3. Press the Horizontal key.

MENU

4. Press XY. The display shows two waveforms in X-Y format; Channel 1 as X-axis, Channel 2 as Y-axis.

XY
- |                                 |                     |                    |
|---------------------------------|---------------------|--------------------|
| Adjusting the X-Y mode waveform | Horizontal position | CH1 Position knob  |
|                                 | Horizontal scale    | CH1 Volts/Div knob |
|                                 | Vertical position   | CH2 Position knob  |
|                                 | Vertical scale      | CH2 Volts/Div knob |
- Example
- Main mode

0.000s

Trig

Hor.MENU

Main

Window

Window Zoom

Roll

XY

0 = 1V

0 = 1V

0.1ns

CH1 EDGE

FDC

249.994Hz

XY mode

Auto

Hor.MENU

Main

Window

Window Zoom

Roll

XY

0 = 1V

0 = 1V

0.1ns

CH1 EDGE

FDC



250.000Hz

XY mode
- 88



## Horizontal Adjustment Menu

**Background** The horizontal adjustment menu allows markers to be set at different times relative to the Horizontal position marker at 0 seconds. Each marker is linked to the mark directly before and after (in time). There can be up to 30 markers linked together.

1. Press the Horizontal menu key twice to enter the horizontal adjustment menu
 
2. Press *H Pos Adj* to toggle between coarse and fine adjustments.
 
3. Adjust the horizontal position with the horizontal position knob.
 
- Set marker** 4. Press *Set/Clear* to create a marker at the current horizontal position.
 
- Delete marker** 5. If there is already a marker at the current horizontal position press *Set/Clear* to delete the current marker.
 
- Reset horizontal position** 6. Press *Reset* to reset the horizontal position to 0 seconds when the trigger is running, or to the last position before the trigger was stopped.
 


Navigate markers 7. Press *Previous* to go to the previous marker.

Previous  
180.0uS



8. Press *Next* to go to the next marker.

Next  
340.0uS

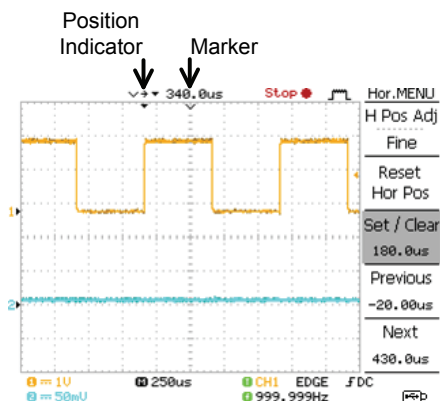

# Vertical View (Channel)

The Vertical view section describes how to set the vertical scale, position, bandwidth limitation, coupling mode, and attenuation.

## Moving the waveform position vertically


|           |                                                                                    |                                                                                   |
|-----------|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Procedure | To move the waveform up or down, turn the vertical position knob for each channel. |  |
|-----------|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|

## Selecting the vertical scale

|           |                                                                                   |                                                                                   |
|-----------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Procedure | To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up). |  |
|-----------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|

|       |                                     |
|-------|-------------------------------------|
| Range | 2mV/Div ~ 10V/Div, 1-2-5 increments |
|-------|-------------------------------------|

## Selecting the coupling mode

|           |                                                                  |                                                                                     |
|-----------|------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Procedure | 1. Press the Channel key.                                        |   |
|           | 2. Press <i>Coupling</i> repeatedly to select the coupling mode. |  |

|       |                                                                                     |                                                                                                                                                                                    |
|-------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Range |  | DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.                                                                                              |
|       |  | Ground coupling mode. The display shows only the zero voltage level as a horizontal line. This mode is useful for measuring the signal amplitude with respect to the ground level. |




AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC components.

## Expand Vertical Scale Center / Ground


### Background

Normally when the vertical scale is increased, the scaled image is centered from ground. However a signal with a voltage bias could be obscured when the vertical scale is increased. The Expand Center function expands the image from the center of the signal, rather than ground.

### Expand Ground

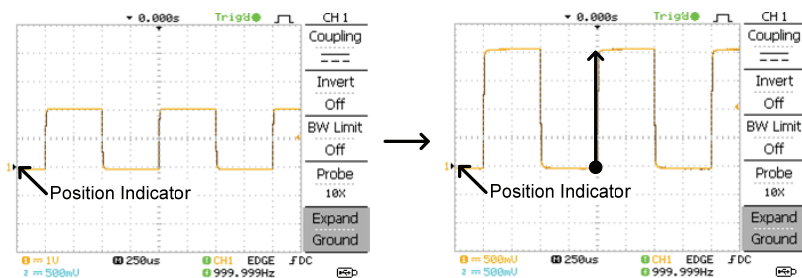

### Expand Center

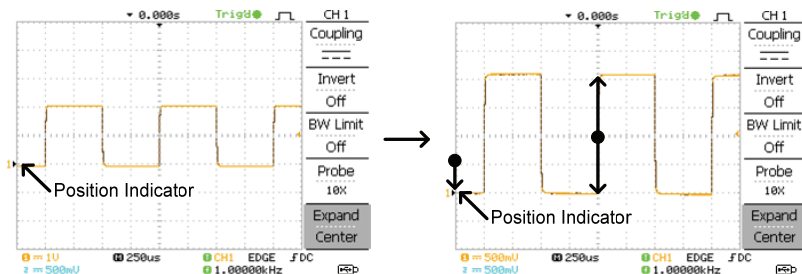


Procedure

1. Press the Channel key.



2. Press F5 to toggle between Expand Center and Expand Ground.



3. To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).



The vertical scale indicator on the bottom left of the display changes accordingly.





## Inverting the waveform vertically

Procedure

1. Press the Channel key.



2. Press *Invert*. The waveform becomes inverted (upside down) and the Channel indicator in the display shows a down arrow.

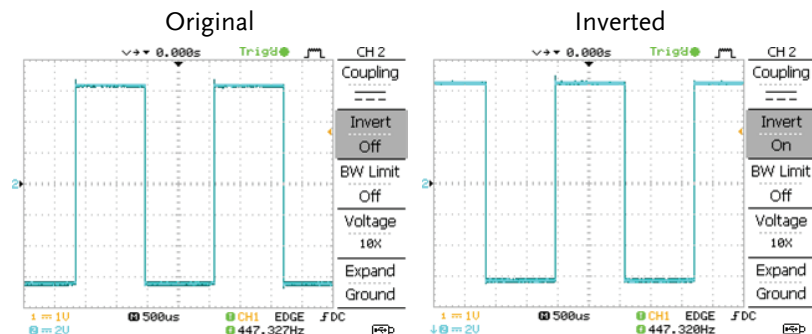

Limiting the waveform bandwidth


**Background**      Bandwidth limitation puts the input signal into a 20MHz (-3dB) low-pass filter. This function is useful for cutting off high frequency noise to see the clear waveform shape.

**Procedure**


1. Press the Channel key.



2. Press *BW Limit* to turn on or off the limitation. When turned on, the BW indicator appears next to the Channel indicator in the display.





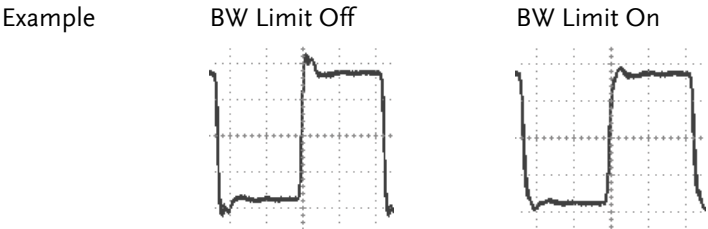

Probe attenuation level and type


**Background**      The probe can be set to either voltage or current. A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage or current level on the display reflects the real value, not the attenuated level.

**Procedure**

1. Press the Channel key.



2. Press *F4* repeatedly to select voltage or current probes.



3. Use the variable knob to edit the voltage or current attenuation.

VARIABLE



4. The voltage/current scale in the channel indicator changes accordingly. There is no change in the waveform shape.

---

|       |                          |
|-------|--------------------------|
| Range | 0.1X~2000X (1-2-5 steps) |
|-------|--------------------------|

---





Note: The attenuation factor adds no influence on the real signal; it only changes the voltage/current scale on the display.

# Trigger

The Trigger function configures the conditions by which the oscilloscope captures the incoming signals.

## Trigger type


|            |                                                                                                 |                                                                                   |
|------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Edge       | Triggers when the signal crosses an amplitude threshold in either a positive or negative slope. |                                                                                   |
| Video      | Extracts a sync pulse from a video format signal and triggers on a specific line or field.      |                                                                                   |
| Pulse      | Triggers when the pulse width of the signal matches the trigger settings.                       |                                                                                   |
| Indicators | Edge/Pulse                                                                                      | Video                                                                             |
|            |                |  |
|            | (CH1, Edge, Rising edge, DC coupling)                                                           | (CH1, Video, Positive polarity, NTSC standard)                                    |

## Trigger parameter

|                |        |                                                                                                                                                                                                                                               |                                                                                     |
|----------------|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Trigger source | CH1, 2 | Channel 1, 2 input signals                                                                                                                                                                                                                    |  |
|                | Line   | AC mains signal                                                                                                                                                                                                                               |                                                                                     |
|                | Ext    | External trigger input signal                                                                                                                                                                                                                 |                                                                                     |
| Trigger mode   | Auto   | The oscilloscope updates the input signal regardless of the trigger conditions (if there is no trigger event, the oscilloscope generates an internal trigger). Select this mode especially when viewing rolling waveforms at a slow timebase. |                                                                                     |



The Auto trigger status appears in the upper right corner of the display.



Single      The oscilloscope acquires the input signals once when a trigger event occurs, then stops acquiring. Pressing the Single key again will repeat the process.



The Single trigger status appears in the upper right corner of the display.



Normal      The oscilloscope acquires and updates the input signals only when a trigger event occurs.


The Normal trigger status appears in the upper right corner of the display.



|                                   |                                                                                                                                                                      |                                      |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| Holdoff                           | The holdoff function defines the waiting period before the GDS-1000A-U starts triggering again after a trigger point. The Holdoff function ensures a stable display. |                                      |
| Video standard<br>(video trigger) | NTSC                                                                                                                                                                 | National Television System Committee |
|                                   | PAL                                                                                                                                                                  | Phase Alternative by Line            |
|                                   | SECAM                                                                                                                                                                | SEquential Couleur A Mémoire         |
| Sync polarity<br>(video trigger)  |                                                                                   | Positive polarity                    |
|                                   |                                                                                   | Negative polarity                    |
| Video line<br>(video trigger)     | Selects the trigger point in the video signal.<br>field      1 or 2                                                                                                  |                                      |

|                                 |                                                                                   |                                                                  |
|---------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------|
|                                 | line                                                                              | 1~263 for NTSC, 1~313 for PAL/SECAM                              |
| Pulse condition (pulse trigger) | Sets the pulse width (20ns ~ 10s) and the triggering condition.                   |                                                                  |
|                                 | >                                                                                 | Longer than = Equal to                                           |
|                                 | <                                                                                 | Shorter than ≠ Not equal to                                      |
| Trigger slope                   |  | Triggers on the rising edge.                                     |
|                                 |  | Triggers on the falling edge.                                    |
| Trigger coupling                | AC                                                                                | Triggers only on AC component.                                   |
|                                 | DC                                                                                | Triggers on AC+DC component.                                     |
| Frequency rejection             | LF                                                                                | Puts a high-pass filter and rejects the frequency below 50kHz.   |
|                                 | HF                                                                                | Puts a low-pass filter and rejects the frequency above 50kHz.    |
| Noise rejection                 | Rejects noise signals.                                                            |                                                                  |
| Trigger level                   |  | Using the trigger level knob moves the trigger point up or down. |

Configuring Holdoff

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                     |  |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Background      | The Holdoff function defines the waiting period before GDS-1000A-U starts triggering again after the trigger point. The holdoff function is especially useful for waveforms with two or more repetitive frequencies or periods that can be triggered.                                                                                                                                                               |  |
| Panel operation | <div><div><div>1. Press the Trigger menu key twice.</div><div></div></div><div><div>2. To set the Holdoff time, use the Variable knob. The resolution depends on the horizontal scale.</div><div></div></div><div>Range 40ns~2.5s</div></div> |  |

Pressing *Set to Minimum* sets the Holdoff time to the minimum, 40ns.

Holdoff  
40.0ns



Note: The holdoff function is automatically disabled when the waveform update mode is in Roll mode.


## Configuring the edge trigger

### Procedure


1. Press the Trigger menu key.



2. Press *Type* repeatedly to select edge trigger.




3. Press *Source* repeatedly to select the trigger source.




Range Channel 1, 2, Line, Ext

4. Press *Mode* repeatedly to select the Auto or Normal trigger mode. To select the single trigger mode, press the Single key.




Range Auto, Normal

5. Press *Slope/coupling* to enter into the trigger slope and coupling selection menu.



6. Press *Slope* repeatedly to select the trigger slope, rising or falling edge.



Range Rising edge, falling edge

7. Press *Coupling* repeatedly to select the trigger coupling, DC or AC.
 

Coupling  
-----  
AC



Range      DC, AC
  
8. Press *Rejection* to select the frequency rejection mode.
 

Rejection  
-----  
Off



Range      LF, HF, Off
  
9. Press *Noise Rej* to turn the noise rejection on or off.
 

Noise Rej  
-----  
Off



Range      On, Off
  
10. Press *Previous* menu to go back to the previous menu.
 

Previous  
-----  
Menu



## Configuring the video trigger

---

### Procedure

1. Press the Trigger menu key.
 


  
2. Press *Type* repeatedly to select video trigger. The video trigger indicator appears at the bottom of the display.
 

Type  
-----  
Video


  
3. Press *Source* repeatedly to select the trigger source channel.
 

Source  
-----  
CH1




Range      Channel 1, 2

4. Press *Standard* repeatedly to select the video standard.




Range NTSC, PAL, SECAM

5. Press *Polarity* repeatedly to select the video signal polarity.



Range positive, negative

6. Press *Line* repeatedly to select the video field line. Use the Variable knob to select the field.



VARIABLE



Field NTSC: 1 ~ 262 (Field 2), 1 ~ 263 (Field 1) PAL/SECAM: 1 ~ 312 (Field 2), 1 ~ 313 (Field1)


## Configuring the pulse width trigger

### Procedure


1. Press the Trigger menu key.



2. Press *Type* repeatedly to select pulse width trigger. The pulse width trigger indicator appears at the bottom of the display.




3. Press *Source* repeatedly to select the trigger source.




Range Channel 1, 2, Ext

4. Press *Mode* repeatedly to select the trigger mode, Auto or Normal. To select the Single trigger mode, press the Single key.



Range      Auto, Normal

5. Press *When* repeatedly to select the pulse condition. Then use the Variable knob to set the pulse width.




VARIABLE



Condition    > , < , = , ≠

Width        20ns ~ 10s

6. Press *Slope/Coupling* to set trigger slope and coupling.




7. Press *Slope* repeatedly to select the trigger slope, which also appears at the bottom of the display.




Range        Rising edge, falling edge

8. Press *Coupling* repeatedly to select the trigger coupling.



Range        DC, AC

9. Press *Rejection* to select the frequency rejection mode.




Range        LF, HF, Off

10. Press *Noise Rej* to turn the noise rejection on or off.



Range      On, Off

11. Press *Previous* menu to go back to the previous menu.



Manually triggering the signal



Note: This section describes how to manually trigger the input signals when the oscilloscope does not capture them. This section applies to the Normal and Single trigger mode, since in the Auto trigger mode, the oscilloscope keeps updating the input signal regardless of the trigger conditions.

To acquire the signal regardless of trigger conditions

To acquire the input signal regardless of the trigger condition, press the Force key. The oscilloscope captures the signals once.



In the Single trigger mode

Press the Single key to start waiting for the trigger condition. To break out of the Single mode, press the Run/Stop key. The trigger mode changes to the Normal mode.




## Rear Panel USB Port Interface

The USB slave port on the rear panel can be set to auto detect, however occasionally the USB host type cannot be detected. The USB Port function allows the USB host type to be manually or automatically set for the rear panel.

|                |                  |                      |
|----------------|------------------|----------------------|
| USB connection | PC / Printer end | Type A, host         |
|                | GDS-1000A-U end  | Type B, slave        |
|                | Speed            | 1.1/2.0 (full speed) |

|           |                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Procedure | <div>1. Connect the USB cable to the USB slave port on the GDS-1000A-U.</div> <div>2. Insert the other end of the USB cable into the PC or Printer USB port.</div> <div>3. Press the Utility key.</div> <div>4. Press <i>More</i> twice.</div> <div>5. Press <i>USB Port</i> repeatedly to set the host device .</div> | <div></div> <div></div> <div></div> <div><div>More</div><div>x2</div></div> <div><div>USB Port</div><div>Auto Detect</div></div> |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|       |                          |
|-------|--------------------------|
| Range | Printer, PC, Auto Detect |
|-------|--------------------------|



# Remote Control Interface

The Remote control interface section describes how to set up the USB interface for PC connection. Remote control command details are described in the GDS-1000A-U Programming Manual. Note that printing to a PictBridge compatible printer and remote control cannot be supported at the same time as the same USB port is used.

|                |                  |                      |
|----------------|------------------|----------------------|
| USB connection | PC / Printer end | Type A, host         |
|                | GDS-1000A-U end  | Type B, slave        |
|                | Speed            | 1.1/2.0 (full speed) |

Procedure

1. Connect the USB cable to the USB slave port.
2. The USB port may need to be configured if the USB port is not automatically detected. page 104
3. When the PC asks for the USB driver, select dso\_cdc\_1000.inf (Windows XP) or dso\_vista\_cdc.inf (Vista 32bit) which are downloadable from the GW website, [www.gwinstek.com](http://www.gwinstek.com), GDS-1000A-U product corner.
4. On the PC, activate a terminal application such as Hyper Terminal. To check the COM port No., see the Device Manager in the PC. For WindowsXP, select Control panel → System → Hardware tab.

5. Run this query command via the terminal application.

`*idn?`

This command should return the manufacturer, model number, serial number, and firmware version in the following format.

GW, GDS-1152A-U, XXXXXXX, V1.00

6. Configuring the command interface is complete. Refer to the programming manual for the remote commands and other details.

# System Settings

The system settings show the oscilloscope’s system information and allow changing the language.


## Viewing the system information

Procedure

1. Press the Utility key.



2. Press *System Info*. The upper half of the display shows the following information.



- Manufacturer
- Model
- Serial number
- Firmware version
- Web address

3. Press any other key to go back to the waveform display mode.



## Selecting the language

Parameter

Language selection differs according to the region to which the oscilloscope is shipped.


- English
- Chinese (traditional)
- Chinese (simplified)
- Japanese
- Korean
- French
- German
- Russian
- Portuguese
- Italian
- Polish
- Spanish

## Procedure

1. Press the Utility key.



2. Press *Language* repeatedly to select the language.



# SAVE/RECALL

The save function allows saving display images, waveform data, and panel settings into the oscilloscope's internal memory or to the front panel USB port. The recall function allows recalling the default factory settings, waveform data, and panel settings from the oscilloscope's internal memory or from USB.

## File Structures

Three types of file are available: display image, waveform file, and panel settings.

### Display image file format

---

|          |                                                                                                                       |
|----------|-----------------------------------------------------------------------------------------------------------------------|
| Format   | xxxx.bmp (Windows bitmap format)                                                                                      |
| Contents | The current display image in 234 x 320 pixels, color mode. The background color can be inverted (Ink saver function). |

### Waveform file format

---

|        |                                                                                                                                                                                                                                     |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Format | xxxx.csv (Comma-separated values format which can be opened in spreadsheet applications such as Microsoft Excel)<br><br>Files can be saved as two different types of CSV formats. The GDS-1000A-U can recall any of the two formats |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                          |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | Detail                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Contains the waveform amplitude and time of each point (4k/1M/2M) relative to the trigger point.                                                                                                                                                                         |
|                       | Fast                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Only contains the waveform amplitude data for each point (4k/1M/2M).                                                                                                                                                                                                     |
| Waveform type         | CH1, 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Input channel signal                                                                                                                                                                                                                                                     |
|                       | Math                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Math operation result (page 63)                                                                                                                                                                                                                                          |
| Storage location      | Internal memory                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | The oscilloscope's internal memory, which can hold 15 waveforms.                                                                                                                                                                                                         |
|                       | External USB Flash drive                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | A USB flash drive (FAT or FAT32 format) can hold practically an unlimited number of waveforms.                                                                                                                                                                           |
|                       | Ref A, B                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Two reference waveforms are used as a buffer to recall a waveform in the display. You have to save a waveform into internal memory or to USB, then copy the waveform into the reference waveform slot (A or B), and then recall the reference waveform into the display. |
| Waveform Memory Depth | <p>The memory depth is limited to 1 M points when both channels are activated or 2M points when only a single channel is activated. The signal must be triggered /stopped to have access to the full memory depth. Therefore when a signal is saved the waveform will be automatically stopped if it is not manually triggered /stopped first.</p> <p>There are a number of conditions when all of the available memory is not utilized due to a limited number of different sample rates. This can be caused by an un-triggered signal, or a time/div setting that is too fast to display all the points on screen.</p> |                                                                                                                                                                                                                                                                          |



Note: 2M point memory lengths are only available for time bases slower than 10ns/div on a single channel, and 1 M point memory lengths are only available for time bases slower than 25ns/div on two channels.

Waveform file  
contents: other  
data

A waveform file also includes the following information.

- Memory Length
- Source
- Vertical Units
- Vertical Position
- Horizontal Scale
- Horizontal Mode
- Firmware
- Mode
- Trigger Level
- Probe
- Vertical Scale
- Horizontal Units
- Horizontal Position
- Sampling Period
- Time
- Waveform Data

## Setup file format


|          |                                                       |                                                                                                                                                                                                                                |  |
|----------|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Format   | xxxx.set (proprietary format)                         |                                                                                                                                                                                                                                |  |
|          | A setup file saves or recalls the following settings. |                                                                                                                                                                                                                                |  |
| Contents | Acquire                                               | <ul style="list-style-type: none"> <li>mode</li> </ul>                                                                                                                                                                         |  |
|          | Cursor                                                | <ul style="list-style-type: none"> <li>source channel</li> <li>cursor on/off</li> <li>cursor location</li> </ul>                                                                                                               |  |
|          | Display                                               | <ul style="list-style-type: none"> <li>dots/vectors</li> <li>accumulation on/off</li> <li>grid type</li> </ul>                                                                                                                 |  |
|          | Measure                                               | <ul style="list-style-type: none"> <li>item</li> </ul>                                                                                                                                                                         |  |
|          | Utility                                               | <ul style="list-style-type: none"> <li>hardcopy type</li> <li>ink saver on/off</li> <li>language</li> <li>Go-Nogo settings</li> <li>Data Logging settings</li> </ul>                                                           |  |
|          | Horizontal                                            | <ul style="list-style-type: none"> <li>display mode</li> <li>scale</li> <li>position</li> </ul>                                                                                                                                |  |
|          | Trigger                                               | <ul style="list-style-type: none"> <li>trigger type</li> <li>source channel</li> <li>trigger mode</li> <li>video standard</li> <li>video polarity</li> <li>video line</li> <li>pulse timing</li> <li>slope/coupling</li> </ul> |  |
|          | Channel (vertical)                                    | <ul style="list-style-type: none"> <li>vertical scale</li> <li>vertical position</li> <li>coupling mode</li> <li>invert on/off</li> <li>bandwidth limit on/off</li> <li>voltage/current (probe)</li> </ul>                     |  |
|          | Math                                                  | <ul style="list-style-type: none"> <li>operation type</li> <li>source channel</li> <li>vertical position</li> <li>unit/div</li> <li>FFT window</li> </ul>                                                                      |  |



Using the USB file utilities

**Background** When a USB flash drive is inserted into the oscilloscope, file utilities (file deletion, folder creation and file/folder renaming) are available from the front panel.

- Procedure**
1. Insert a USB flash drive into the front panel USB port.


2. Press the Save/Recall key. Select any save or recall function. For example USB Destination in the Save image function.

Save/Recall



(Example)


Save Image



Destination

USB
3. Press *File Utilities*. The display shows the USB flash drive contents.

File Utilities


4. Use the Variable knob to move the cursor. Press *Select* to go into the folder or go back to the previous directory level.


VARIABLE



Select




**USB flash drive indicator** When a USB flash drive is inserted into the oscilloscope, an indicator appears at the right bottom corner of the display. (The USB flash drive shouldn't be removed when a file is saved or retrieved from USB).




Creating a new folder / renaming a file or folder

- 1. Move the cursor to the file or folder location and press *New Folder* or *Rename*. The file/folder name and the character map will appear on the display.

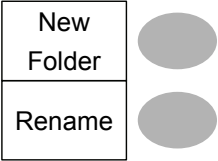

- 2. Use the Variable knob to move the pointer to the characters. Press *Enter Character* to add a character or *Back Space* to delete a character.

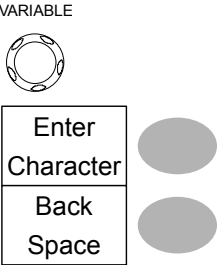


- 3. When editing is complete, press *Save*. The new/renamed file or folder will be saved.






Deleting a folder or file

- 1. Move the cursor to the folder or file location and press *Delete*. The message "*Press F4 again to confirm this process*" appears at the bottom of the display.
- 2. If the file/folder still needs to be deleted, press *Delete* again to complete the deletion. To cancel the deletion, press any other key.

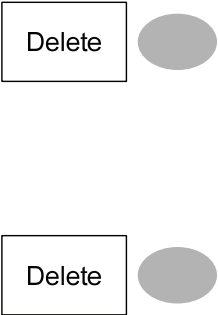

# Quick Save (HardCopy)

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                     |                                                                                                                                                                                                        |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Background      | <p>The Hardcopy key works as a shortcut for printing screen images directly to a printer or to save display images, waveform data, and panel settings onto a USB flash drive card.</p> <p>The Hardcopy key can be configured into three types of operations: save image, save all (image, waveform, setup) and printer.</p> <p>Using the Save/Recall key can also save files with more options. For details, see page 117.</p> |                                                                                                                                                                                                                     |  <p>Hardcopy</p>  <p>Save/Recall</p> |
| Functionalities | Save image (*.bmp)                                                                                                                                                                                                                                                                                                                                                                                                             | Saves the current display image into a USB flash drive.                                                                                                                                                             |                                                                                                                                                                                                        |
|                 | Save all                                                                                                                                                                                                                                                                                                                                                                                                                       | Saves the following items into a USB flash drive. <ul style="list-style-type: none"><li>• Current display image (*.bmp)</li><li>• Current system settings (*.set)</li><li>• Current waveform data (*.csv)</li></ul> |                                                                                                                                                                                                        |
| Procedure       | <ol style="list-style-type: none"><li>1. Insert a USB flash drive into the front panel USB port.</li><li>2. Press the Utility key.</li><li>3. Press <i>Hardcopy Menu</i>.</li><li>4. Press <i>Function</i> repeatedly to select <i>Save Image</i> or <i>Save All</i>.</li></ol>                                                                                                                                                |                                                                                                                                                                                                                     |                                                                                                                                                                                                        |



5. To invert the color in the display image, press *Ink Saver*. This turns Ink Saver on or off.



6. If *Save Image* was selected, press *Mem Leng* repeatedly to select *USB Normal* or *USB 1M/2M*. USB Normal and USB 1M/2M sets the waveforms to a 4k and 1M/2M memory length when saving, respectively.



1M memory length is available when both CH1 and CH2 are active; 2M memory length is available when a single channel is active only.

7. Press the Hardcopy key. The file or folder will be saved to the root directory of the USB flash drive.



## Save

This section describes how to save data using the Save/Recall menu.


### File type/source/destination

| Item                       | Source                                                                                                                                         | Destination                                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Panel setup<br>(xxx.set)   | <ul style="list-style-type: none"><li>• Panel settings</li></ul>                                                                               | <ul style="list-style-type: none"><li>• Internal memory: S1 ~ S15</li><li>• External memory: USB</li></ul>                                   |
| Waveform data<br>(xxx.csv) | <ul style="list-style-type: none"><li>• Channel 1, 2</li><li>• Math operation result</li><li>• Reference waveform A, B</li></ul>               | <ul style="list-style-type: none"><li>• Internal memory: W1 ~ W15</li><li>• Reference waveform A, B</li><li>• External memory: USB</li></ul> |
| Display image<br>(xxx.bmp) | <ul style="list-style-type: none"><li>• Display image</li></ul>                                                                                | <ul style="list-style-type: none"><li>• External memory: USB</li></ul>                                                                       |
| Save All                   | <ul style="list-style-type: none"><li>• Display image (xxx.bmp)</li><li>• Waveform data (xxx.csv)</li><li>• Panel settings (xxx.set)</li></ul> | <ul style="list-style-type: none"><li>• External memory: USB</li></ul>                                                                       |


## Saving the panel settings

### Procedure

1. (For saving to USB flash drive) Insert the USB flash drive into the front panel USB port.




2. Press the Save/Recall key twice to access the Save menu.



3. Press *Save Setup*.



4. Press *Destination* repeatedly to select the saved location. Use the Variable knob to change the internal memory location (S1 ~ S15).

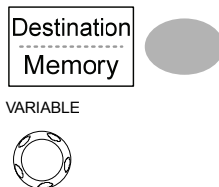

Memory      Internal memory, S1 ~ S15

USB      USB, no practical limitation for the amount of files. When saved, the setup file will be placed in the root directory.

5. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.




Note

The file will not be saved if the power is turned off or the USB flash drive is removed before completion.

File utilities


To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.



## Saving the waveform

Procedure


1. (For saving to USB flash drive) Insert the USB flash drive into the front panel USB port.




2. Press the Save/Recall key twice to access the Save menu.



3. Press *Save Waveform*.



4. Press *Source*. Use the Variable knob to select the source signal.



VARIABLE



CH1 ~ CH2 Channel 1 ~ 2 signal

Math Math operation result (page 63)

RefA, B Internally stored reference waveforms A, B

5. Press *Destination* repeatedly to select the file destination. Use the Variable knob to select the memory location.



VARIABLE



|            |                                                                                                  |
|------------|--------------------------------------------------------------------------------------------------|
| Memory     | Internal memory, W1 ~ W15                                                                        |
| USB Normal | Save to the USB flash drive with a 4k waveform memory length.                                    |
| USB 1M     | Save to the USB flash drive with a 1M waveform memory length. For 2 channel operation only.      |
| USB 2M     | Save to the USB flash drive with a 2M waveform memory length. For single channel operation only. |
| Ref        | Internal reference waveform, A/B                                                                 |

6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note

The file will not be saved if the power is turned off or the USB flash drive is removed from the USB port.

It takes approximately 1 min to save a 2M waveform to the USB drive in fast mode. Detailed mode may take over 10 times longer depending on the speed of the USB flash drive.

File utilities

To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.






## Saving the display image

**Background** Saving the display image can be used as a screen capture or it can be used as a reference waveform.

**Procedure**


1. Insert the USB flash drive into the front panel USB port. (Image files can only be saved to USB)



2. Press the Save/Recall key twice to access the Save menu.



3. Press *Save Image*.




4. Press *Ink Saver* repeatedly to invert the background color (on) or not (off).



5. Note: *Destination* is set as USB. This cannot be changed.



6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note

The file will not be saved if the power is turned off or the USB flash drive is removed before completion.

**File utilities**


To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.




## Saving all (panel settings, display image, waveform)

### Procedure


1. (For saving to USB flash drive) Insert the USB flash drive into the front panel USB port.



2. Press the Save/Recall key twice to access the Save menu.



3. Press *Save All*. The following information will be saved.



Setup file  
(Axxxx.set)

Two types of setups are saved: the current panel setting and the last internally saved settings (one of S1 ~ S15).

Display image  
(Axxxx.bmp)

The current display image in bitmap format.

Waveform data  
(Axxxx.csv)

Two types of waveform data are saved: the currently active channel data and the last internally saved data (one of W1 ~ W15).

4. Press *Ink Saver* repeatedly to invert the background color (on) or not (off) for the display image.



5. Press *Destination*.





USB  
Normal

Save to the USB flash drive with a 4k waveform memory length.

USB 1M      Save to the USB flash drive with a 1M waveform memory length. For 2 channel operation only.

USB 2M      Save to the USB flash drive with a 2M waveform memory length. For single channel operation only.

6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note


The file will not be saved if the power is turned off or the USB flash drive is removed from the USB port.

It takes approximately 1 min to save a 2M waveform to the USB drive in fast mode. Detailed mode may take over 10 times longer depending on the speed of the USB flash drive.

7. The current waveform(s) (\*.CSV), setup file (\*.SET) and display image (\*.BMP) are saved to a directory (ALLXXXX).

File utilities

To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.




## Recall

### File type/source/destination

| Item                       | Source                                                                                                                 | Destination                                                               |
|----------------------------|------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| Default panel setup        | <ul style="list-style-type: none"><li>• Factory installed setting</li></ul>                                            | <ul style="list-style-type: none"><li>• Current front panel</li></ul>     |
| Reference waveform         | <ul style="list-style-type: none"><li>• Internal memory: A, B</li></ul>                                                | <ul style="list-style-type: none"><li>• Current front panel</li></ul>     |
| Panel setup (DSxxxx.set)   | <ul style="list-style-type: none"><li>• Internal memory: S1 ~ S15</li><li>• External memory: USB flash drive</li></ul> | <ul style="list-style-type: none"><li>• Current front panel</li></ul>     |
| Waveform data (DSxxxx.csv) | <ul style="list-style-type: none"><li>• Internal memory: W1 ~ W15</li><li>• External memory: USB flash drive</li></ul> | <ul style="list-style-type: none"><li>• Reference waveform A, B</li></ul> |

Recalling the default panel settings

|                  |                                                                                              |                                                                                            |
|------------------|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Procedure        | 1. Press the Save/Recall key.                                                                |           |
|                  | 2. Press <i>Default Setup</i> . The factory installed setting will be recalled.              |           |
| Setting contents | The following is the default panel setting contents.                                         |                                                                                            |
| Acquisition      | Mode: Normal                                                                                 |                                                                                            |
| Channel          | Coupling: DC                                                                                 | Invert: Off                                                                                |
|                  | BW limit: Off                                                                                | voltage: x1                                                                                |
| Cursor           | Source: CH1                                                                                  | Horizontal: None                                                                           |
|                  | Vertical: None                                                                               |                                                                                            |
| Display          | Type: Vectors                                                                                | Accumulate: Off                                                                            |
|                  | Graticule:  |                                                                                            |
| Horizontal       | Scale: 2.5us/Div                                                                             | Mode: Main Timebase                                                                        |
|                  | H Pos Adj: Fine                                                                              | Hor Pos: 0                                                                                 |
| Math             | Type: + (Add)                                                                                | Channel: CH1+CH2                                                                           |
|                  | Position: 0.00 Div                                                                           | Unit/Div: 2V                                                                               |
| Measure          | Item: Vpp, Vavg, Frequency, Duty cycle, Rise Time                                            |                                                                                            |
| Trigger          | Type: Edge                                                                                   | Source: Channel1                                                                           |
|                  | Mode: Auto                                                                                   | Slope:  |
|                  | Coupling: DC                                                                                 | Rejection: Off                                                                             |
|                  | Noise Rejection: Off                                                                         |                                                                                            |
| Utility          | SaveImage, InkSaver On, Probe squarewave 1kHz 50% duty.                                      |                                                                                            |

## Recalling a reference waveform to the display

### Procedure

1. The reference waveform must be stored in advance. See page 119 for details.



2. Press the Save/Recall key.




3. Press *Display Refs.* The reference waveform display menu appears.



4. Select the reference waveform, *Ref A* or *Ref B*, and press it. The waveform appears on the display and the period and amplitude of the waveform appears in the menu.




5. To clear the waveform from the display, press *RefA/B* again.



## Recalling panel settings

### Procedure


1. (For recalling to USB) Insert the USB flash drive into the front panel USB port.




2. Press the Save/Recall key.



3. Press *Recall Setup*.




4. Press *Source* repeatedly to select the file source, internal or external memory. Use the Variable knob to change the memory.

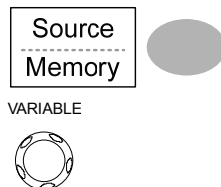

Memory Internal memory, S1 ~ S15

USB USB flash drive, DSXXXX.SET. The setup file(s) must be placed in the root directory to be recognized.

5. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.



Note 

The file will not be recalled if the power is turned off or the USB flash drive is removed before completion.

#### File utilities


To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.



## Recalling a waveform

#### Procedure


1. (For recalling to USB) Insert the USB flash drive into the front panel USB port.




2. Press the Save/Recall key.



3. Press *Recall Waveform*. The display shows the available source and destination options.



4. Press *Source* repeatedly to select the file source, internal memory or USB. Use the Variable knob to change the memory location (W1 ~ W15)/DSXXXX.CSV.




VARIABLE



|        |                                                                                                      |
|--------|------------------------------------------------------------------------------------------------------|
| Memory | Internal memory, W1 ~ W15                                                                            |
| USB    | USB flash drive, DSXXXX.CSV. The waveform file(s) must be placed in the root directory to be loaded. |

5. Press *Destination*. Use the Variable knob to select the memory location.



VARIABLE



|         |                                            |
|---------|--------------------------------------------|
| RefA, B | Internally stored reference waveforms A, B |
|---------|--------------------------------------------|

6. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.




Note

The file will not be recalled if the power is turned off or the USB flash drive is removed before completion.



## File utilities

To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.




## Recall Image

### Background


Recall Image is useful for recalling reference images that would not be possible using the Recall Waveform function, such as in X-Y mode. Using the Recall Image function will superimpose the reference image on the screen.

Before recalling an image, an image must first be saved to USB, see page 121.

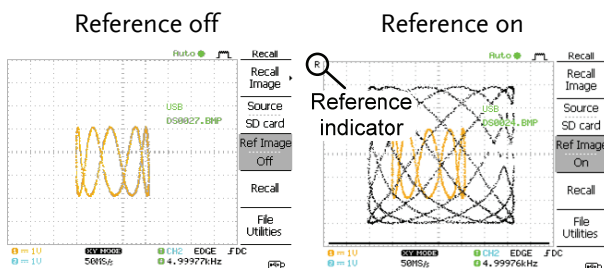

### Procedure

1. Insert the USB flash drive into the front panel USB.



2. Press the Save/Recall key.



3. Press *Recall Image*. The display shows the available source and destination options.



4. Use the Variable knob to choose a file name (DSXXXX.BMP).


VARIABLE



USB

The image file must be placed in the root directory to be recognized.

5. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.



6. Press *Reference Image* to turn on /off the current image.




Note 

The file will not be recalled if the power is turned off or the USB flash drive is removed before completion.

File utilities

To edit the USB drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 113.





# P RINT

The GDS-1000A-U is able to print screen images directly to a PictBridge compatible printer. The printed images can use the “Ink Saver” feature to print onto a white rather than a black background to reduce the amount of ink used. Note that printing and remote control cannot be used at the same time.

## Print (Hardcopy)

|                 |                                                                                                                                                                                                                                                                                                          |                                                                                                   |              |                 |               |       |                      |  |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|--------------|-----------------|---------------|-------|----------------------|--|
| Background      | <p>The Hardcopy key works as a shortcut for printing screen images directly to a printer or to save display images, waveform data, and panel settings onto USB.</p> <p>The Hardcopy key can be configured into three types of operations: save image, save all (image, waveform, setup) and printer.</p> | <p>Hardcopy</p>  |              |                 |               |       |                      |  |
| USB connection  | <table><tr><td>Printer end</td><td>Type A, host</td></tr><tr><td>GDS-1000A-U end</td><td>Type B, slave</td></tr><tr><td>Speed</td><td>1.1/2.0 (full speed)</td></tr></table>                                                                                                                             | Printer end                                                                                       | Type A, host | GDS-1000A-U end | Type B, slave | Speed | 1.1/2.0 (full speed) |  |
| Printer end     | Type A, host                                                                                                                                                                                                                                                                                             |                                                                                                   |              |                 |               |       |                      |  |
| GDS-1000A-U end | Type B, slave                                                                                                                                                                                                                                                                                            |                                                                                                   |              |                 |               |       |                      |  |
| Speed           | 1.1/2.0 (full speed)                                                                                                                                                                                                                                                                                     |                                                                                                   |              |                 |               |       |                      |  |
| Procedure       | <p>1. Connect the USB cable to the USB slave port on the GDS-1000A-U rear panel.</p>                                                                                                                                                                                                                     |                |              |                 |               |       |                      |  |


2. Insert the other end of the USB cable into the printer USB port.

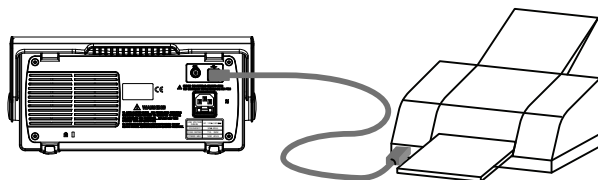

3. Press the Utility key.



4. Press the *More* key twice.




5. Press *USB Port* repeatedly to set the USB Port to Printer.




6. Press the Utility key.



7. Press *Hardcopy Menu*.



8. Press *Function* repeatedly to select *Printer*.



9. To invert the color in the display image, press *Ink Saver*. This turns Ink Saver on or off.




10. To change the default page size, press *Page Size*.

Page Size  
Default



|         |                               |
|---------|-------------------------------|
| Default | Default printer page setting. |
| 4 X 6   | 4 X 6 inches                  |
| A4      | Standard A4 size              |

11. Press the Hardcopy key.  
The current screen image will be printed to the printer.

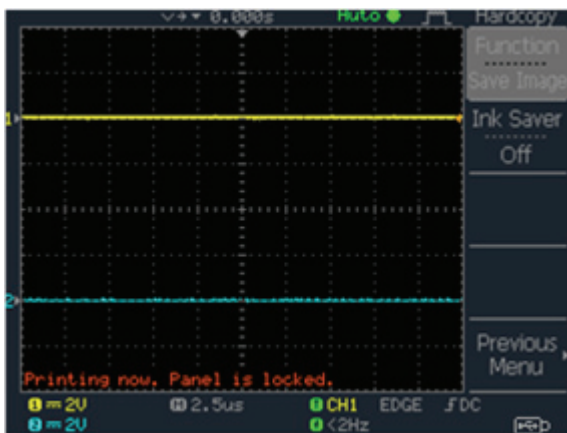

The Hardcopy key can be used to print to a printer each time until it is configured otherwise.



Note

If the error message “Printer Not Ready” is displayed, please check to ensure the printer is turned on, the USB cable is properly connected, and that the printer is ready.

# M AINTENANCE

Two types of maintenance operations are available: calibrating the vertical resolution, and compensating the probe. Run these operations when using the oscilloscope in a new environment.


## Vertical Resolution Calibration

### Procedure

1. Press the Utility key.



2. Press the *More* key twice.




3. Press *Self Cal Menu*.



4. Press *Vertical*. The message "Set CAL to CH1, then press F5" appears at the bottom of the display.




5. Connect the calibration signal between the rear panel CAL out terminal and the Channel1 input.



6. Press F5. The calibration automatically starts.

7. The Channel1 calibration will complete in less than 5 minutes.



8. When finished, connect the calibration signal to the Channel 2 input and repeat the procedure.




9. When the calibration is complete the display will go back to the previous state.

## Probe Compensation

### Procedure


1. Connect the probe between the Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe voltage attenuation to x10.

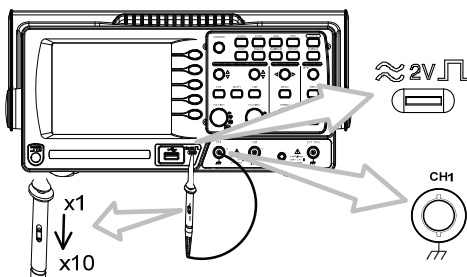


2. Press the Utility key.



3. Press *ProbeComp*.





4. Press *Wavetype* repeatedly to select the standard square wave.





5. Press the Autoset key. The compensation signal will appear in the display.



6. Press the Display key, then *Type* to select the vector waveform.

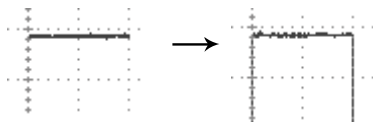

7. Turn the adjustment point on the probe until the signal edge becomes sharp.

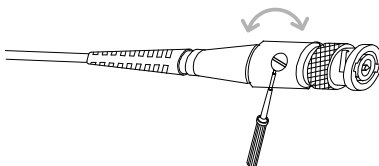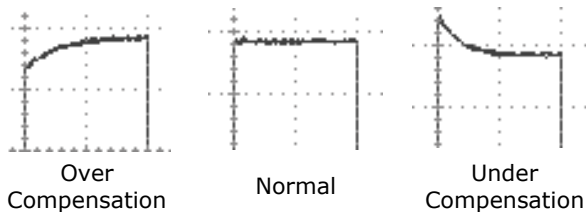



# F AQ

---

- The input signal does not appear in the display.
- I want to remove some contents from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Autoset does not catch the signal well.
- I want to clean up the cluttered panel settings.
- The accuracy does not match the specifications.
- The oscilloscope will not allow a 2M waveform to be saved.

## The input signal does not appear in the display.

---

Make sure you have activated the channel by pressing the CH key (page 47).

## I want to remove some contents from the display.

---

To clear the math result, press the Math key again (page 63).

To clear the cursor, press the Cursor key again (page 61).

To clear the Help contents, press the Help key again (page 46).

The waveform does not update (frozen).

---

Press the Run/Stop key to unfreeze the waveform. See page 50 for details. For trigger setting details, see page 96.

If this does not help, press the CH key. If the signal still does not appear, press the Autoset key.

The probe waveform is distorted.

---

You might need to compensate the probe. For details, see page 135. Note that the frequency accuracy and duty factor are not specified for probe compensation waveforms and therefore it should not be used for other reference purposes.

Autoset does not catch the signal well.

---

The Autoset function does not catch signals well under 30mV or 2Hz. Please operate the oscilloscope manually. See page 48 for details.

I want to clean up the cluttered panel settings.

---

Recall the default settings by pressing the Save/Recall key→Default Setting. For default setting contents, see page 45.

The saved display image is too dark on the background.

---

Use the Inksaver function which reverses the background color. For details, see page 121.

The accuracy does not match the specifications.

---

Make sure the device is powered on for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

The oscilloscope will not allow a 2M waveform to be saved.

---

Make sure that only 1 channel is active. Make sure that the signal has been triggered and that the STOP or Single key has been pressed. Ensure the time base is slower than 10 ns/div. See page 109.


For more information, contact your local dealer or GWInstek at [www.gwinstek.com](http://www.gwinstek.com) / [marketing@goodwill.com.tw](mailto:marketing@goodwill.com.tw).

# APPENDIX


## Fuse Replacement

---

- Procedure
1. Remove the power cord and remove the fuse socket using a minus driver.

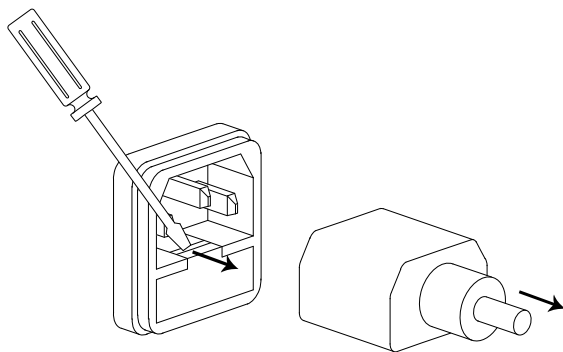

2. Replace the fuse in the holder.

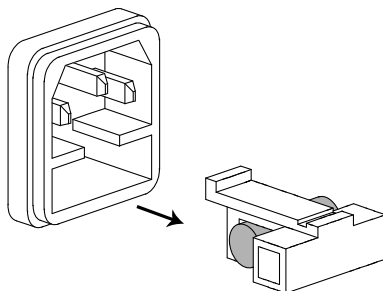

---

Ratings      T1A, 250V

## GDS-1000A-U Series Specifications

The specifications apply when the oscilloscope is powered on for at least 30 minutes under +20°C~+30°C.

### Model-specific specifications

|             |                              |                                                             |
|-------------|------------------------------|-------------------------------------------------------------|
| GDS-1072A-U | Bandwidth (-3dB)             | DC coupling: DC ~ 70MHz<br>AC coupling: 10Hz ~ 70MHz        |
|             | Bandwidth Limit              | 20MHz (-3dB)                                                |
|             | Trigger Sensitivity          | 0.5div or 5mV (DC ~ 25MHz)<br>1.5div or 15mV (25MHz~70MHz)  |
|             | External Trigger Sensitivity | ~ 50mV (DC~25MHz)<br>~ 100mV (25MHz~70MHz)                  |
|             | Rise Time                    | < 5ns approx.                                               |
| GDS-1102A-U | Bandwidth (-3dB)             | DC coupling: DC ~ 100MHz<br>AC coupling: 10Hz ~ 100MHz      |
|             | Bandwidth Limit              | 20MHz (-3dB)                                                |
|             | Trigger Sensitivity          | 0.5div or 5mV (DC ~ 25MHz)<br>1.5div or 15mV (25MHz~100MHz) |
|             | External Trigger Sensitivity | ~ 50mV (DC~25MHz)<br>~ 100mV (25MHz~100MHz)                 |
|             | Rise Time                    | < 3.5ns approx.                                             |
| GDS-1152A-U | Bandwidth (-3dB)             | DC coupling: DC ~ 150MHz<br>AC coupling: 10Hz ~ 150MHz      |
|             | Bandwidth Limit              | 20MHz (-3dB)                                                |
|             | Trigger Sensitivity          | 0.5div or 5mV (DC ~ 25MHz)<br>1.5div or 15mV (25MHz~150MHz) |
|             | External Trigger Sensitivity | ~ 50mV (DC~25MHz)<br>~ 100mV (25MHz~100MHz)                 |
|             | Rise Time                    | < 2.3ns approx.                                             |

## Common specifications

|                    |                 |                                                                                                                  |
|--------------------|-----------------|------------------------------------------------------------------------------------------------------------------|
| Vertical           | Sensitivity     | 2mV/div~10V/Div (1-2-5 increments)                                                                               |
|                    | Accuracy        | $\pm (3\% \times  \text{Readout}  + 0.1 \text{ div} + 1 \text{ mV})$                                             |
|                    | Bandwidth       | See model-specific specifications                                                                                |
|                    | Rise Time       | See model-specific specifications                                                                                |
|                    | Input Coupling  | AC, DC, Ground                                                                                                   |
|                    | Input Impedance | 1M $\Omega$ $\pm$ 2%, ~15pF                                                                                      |
|                    | Polarity        | Normal, Invert                                                                                                   |
|                    | Maximum Input   | 300V (DC+AC peak), CAT II                                                                                        |
|                    | Math Operation  | +, -, $\times$ , FFT, FFT rms                                                                                    |
| Trigger            | Offset Range    | 2mV/div~50mV/div: $\pm$ 0.4V<br>100mV/div~500mV/div: $\pm$ 4V<br>1V/div~5V/div: $\pm$ 40V<br>10V/div: $\pm$ 300V |
|                    | Sources         | CH1, CH2, Line, EXT                                                                                              |
|                    | Modes           | Auto, Normal, Single, TV, Edge, Pulse                                                                            |
|                    | Coupling        | AC, DC, LF rej, HF rej, Noise rej                                                                                |
|                    | Sensitivity     | See model-specific specifications                                                                                |
| External trigger   | Holdoff         | 40ns ~ 2.5s                                                                                                      |
|                    | Range           | DC: $\pm$ 15V, AC: $\pm$ 2V                                                                                      |
|                    | Sensitivity     | See model-specific specifications                                                                                |
|                    | Input Impedance | 1M $\Omega$ $\pm$ 2%, ~15pF                                                                                      |
| Horizontal         | Maximum Input   | 300V (DC+AC peak), CATII                                                                                         |
|                    | Range           | 1ns/div~50s/div, 1-2-5-5 increment<br>Roll: 50ms/div – 50s/div                                                   |
|                    | Modes           | Main, Window, Window Zoom, Roll, X-Y                                                                             |
|                    | Accuracy        | $\pm$ 0.01%                                                                                                      |
|                    | Pre-Trigger     | 10 div maximum                                                                                                   |
| X-Y Mode           | Post-Trigger    | 1000 div                                                                                                         |
|                    | X-Axis Input    | Channel 1                                                                                                        |
|                    | Y-Axis Input    | Channel 2                                                                                                        |
| Signal Acquisition | Phase Shift     | $\pm$ 3° at 100kHz                                                                                               |
|                    | Real-Time       | 1G Sa/s maximum                                                                                                  |
|                    | Equivalent      | 25G Sa/s maximum                                                                                                 |
|                    | Vertical        | 8 bits                                                                                                           |
|                    | Resolution      |                                                                                                                  |
|                    | Record Length   | Maximum; 2M points (1 channel), 1M points (2 channels)                                                           |
|                    | Acquisition     | Normal, Peak Detect, Average                                                                                     |
|                    | Peak Detection  | 10ns (500ns/div ~ 50s/div)                                                                                       |
|                    | Average         | 2, 4, 8, 16, 32, 64, 128, 256                                                                                    |

|                           |                                                   |                                                                                                                   |
|---------------------------|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Cursors and Measurement   | Voltage                                           | Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot                   |
|                           | Time                                              | Freq, Period, Rise Time, Fall Time, + Width, – Width, Duty Cycle                                                  |
|                           | Delay                                             | FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF                                                                            |
|                           | Cursors                                           | Voltage difference ( $\Delta V$ ) and Time difference ( $\Delta T$ ) between cursors                              |
|                           | Auto Counter                                      | Resolution: 6 digits, Accuracy: $\pm 2\%$<br>Signal source: All available trigger source except the Video trigger |
| Control Panel Function    | Autoset                                           | Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level                                    |
|                           | Save/Recall                                       | Up to 15 sets of measurement conditions and waveforms                                                             |
| Display                   | LCD                                               | 5.7 inch, TFT, brightness adjustable                                                                              |
|                           | Resolution (dots)                                 | 234 (Vertical) x 320 (Horizontal)                                                                                 |
|                           | Graticule                                         | 8 x 10 divisions                                                                                                  |
|                           | Display Contrast                                  | Adjustable                                                                                                        |
| Interface                 | USB Slave Connector                               | USB1.1 & 2.0 full speed compatible (flash disk not supported)                                                     |
|                           | USB Host connector                                | Image (BMP) and waveform data (CSV)                                                                               |
| Probe Compensation Signal | Frequency range                                   | 1kHz ~ 100kHz adjustable, 1kHz step                                                                               |
|                           | Duty cycle                                        | 5% ~ 95% adjustable, 5% step                                                                                      |
|                           | Amplitude                                         | 2Vpp $\pm 3\%$                                                                                                    |
| Power Source              | Line Voltage                                      | 100V~240V AC, 47Hz~63Hz                                                                                           |
|                           | Power Consumption                                 | 18W, 40VA maximum                                                                                                 |
|                           | Fuse Rating                                       | 1A slow, 250V                                                                                                     |
| Operation Environment     | Ambient temperature 0 ~ 50°C                      |                                                                                                                   |
|                           | Relative humidity $\leq 80\%$ , 40°C or below     |                                                                                                                   |
|                           | $\leq 45\%$ , 41°C~50°C                           |                                                                                                                   |
| Storage Environment       | Storage Temperature: -10°C~60°C, no condensation- |                                                                                                                   |
|                           | Relative humidity 93% @ 40°C<br>65% @ 41°C~60°C   |                                                                                                                   |
| Dimensions                | 310(W) x 142(H) x 140(D) mm                       |                                                                                                                   |
| Weight                    | Approx. 2.5kg                                     |                                                                                                                   |

## Probe Specifications

### GDS-1072A-U Probe

|                          |                       |                                  |
|--------------------------|-----------------------|----------------------------------|
| Applicable model & probe |                       | GDS-1072A-U<br>GTP-070A-4*       |
| Position x 10            | Attenuation Ratio     | 10:1                             |
|                          | Bandwidth             | DC ~ 70MHz                       |
|                          | Input Resistance      | 10MΩ when used with 1MΩ input    |
|                          | Input Capacitance     | 28pF~32pF                        |
|                          | Maximum Input Voltage | ≤600Vpk, Derating with frequency |
| Position x 1             | Attenuation Ratio     | 1:1                              |
|                          | Bandwidth             | DC ~ 6MHz                        |
|                          | Input Resistance      | 1MΩ when used with 1MΩ input     |
|                          | Input Capacitance     | 120pF~220pF                      |
|                          | Maximum Input Voltage | ≤200Vpk, Derating with frequency |
| Operating Cond.          | Temperature           | -10°C ~ 50°C                     |
|                          | Relative Humidity     | ≤85%                             |
| Safety Standard          | EN 61010-031 CAT II   |                                  |

### GDS-1102A-U Probe

|                          |                       |                                  |
|--------------------------|-----------------------|----------------------------------|
| Applicable model & probe |                       | GDS-1102A-U<br>GTP-100A-4*       |
| Position x 10            | Attenuation Ratio     | 10:1                             |
|                          | Bandwidth             | DC ~ 100MHz                      |
|                          | Input Resistance      | 10MΩ when used with 1MΩ input    |
|                          | Input Capacitance     | 14.5~17.5pF approx.              |
|                          | Maximum Input Voltage | ≤600Vpk, Derating with frequency |
| Position x 1             | Attenuation Ratio     | 1:1                              |
|                          | Bandwidth             | DC ~ 6MHz                        |
|                          | Input Resistance      | 1MΩ when used with 1MΩ input     |
|                          | Input Capacitance     | 85~115pF approx.                 |
|                          | Maximum Input Voltage | ≤200Vpk, Derating with frequency |
| Operating Cond.          | Temperature           | -10°C ~ 50°C                     |
|                          | Relative Humidity     | ≤85% @35°C                       |
| Safety Standard          |                       | EN 61010-031 CAT II              |




## GDS-1152A-U Probe

|                          |                       |                                                              |
|--------------------------|-----------------------|--------------------------------------------------------------|
| Applicable model & probe |                       | GDS-1152A-U<br>GTP-150A-2*                                   |
| Position x 10            | Attenuation Ratio     | 10:1                                                         |
|                          | Bandwidth             | DC ~ 150MHz                                                  |
|                          | Input Resistance      | 10M $\Omega$ when used with 1M $\Omega$ input                |
|                          | Input Capacitance     | 17pF approx.                                                 |
|                          | Maximum Input Voltage | 500V CAT I, 300V CAT II (DC+Peak AC) Derating with frequency |
| Position x 1             | Attenuation Ratio     | 1:1                                                          |
|                          | Bandwidth             | DC ~ 6MHz                                                    |
|                          | Input Resistance      | 1M $\Omega$ when used with 1M $\Omega$ input                 |
|                          | Input Capacitance     | 47pF approx.                                                 |
|                          | Maximum Input Voltage | 300V CAT I, 150V CAT II (DC+Peak AC) Derating with frequency |
| Operating Cond.          | Temperature           | -10°C ~ 55°C                                                 |
|                          | Relative Humidity     | ≤85% @35°C                                                   |
| Safety Standard          |                       | EN 61010-031 CAT II                                          |

\* Note: GW Instek reserves the right to change the probe model type (GTP-070A-4, GTP-100A-4, GTP-150A-2) at anytime without notice for probe model types of similar specification.

## Dimensions

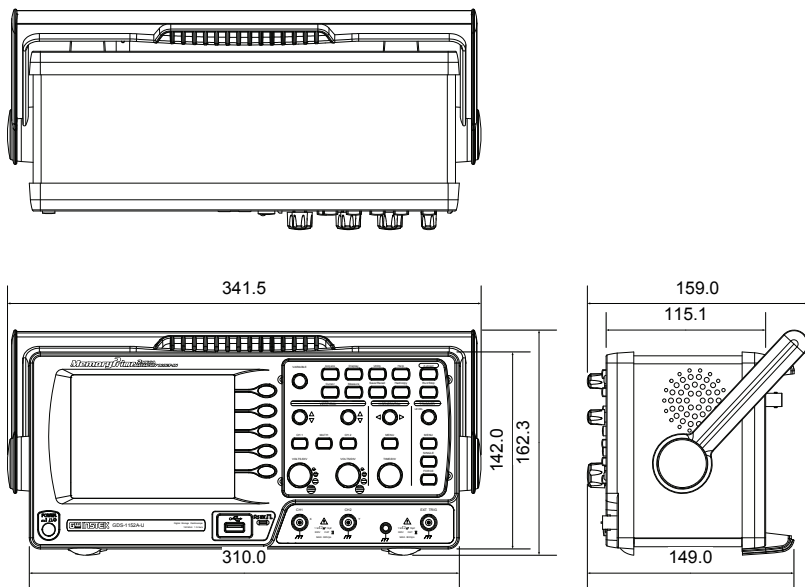

## EC Declaration of Conformity

We

**GOOD WILL INSTRUMENT CO., LTD.**

No.7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan

**GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.**

No. 69, Lushan Road, Suzhou New District Jiangsu, China

declares that the below mentioned product

**GDS-1072A-U, GDS-1102A-U, GDS-1152A-U**

Are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC) and Low Voltage Equipment Directive (2006/95/EC). For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Equipment Directive, the following standards were applied:

### © EMC

| EN 61326-1 :<br>EN 61326-2-1: Electrical equipment for measurement, control and laboratory use — EMC requirements (2006) |                                                           |
|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| Conducted and Radiated Emissions<br>EN 55011: 2009+A1: 2010                                                              | Electrostatic Discharge<br>EN 61000-4-2: 2009             |
| Current Harmonic<br>EN 61000-3-2: 2006+A1: 2009+A2: 2009                                                                 | Radiated Immunity<br>EN 61000-4-3: 2006+A1: 2008+A2 :2010 |
| Voltage Fluctuation<br>EN 61000-3-3: 2008                                                                                | Electrical Fast Transients<br>EN 61000-4-4: 2004+A1: 2010 |
| -----                                                                                                                    | Surge Immunity<br>EN 61000-4-5: 2006                      |
| -----                                                                                                                    | Conducted Susceptibility<br>EN 61000-4-6: 2009            |
| -----                                                                                                                    | Power Frequency Magnetic Field<br>EN 61000-4-8: 2010      |
| -----                                                                                                                    | Voltage Dips/ Interrupts<br>EN 61000-4-11: 2004           |

### © Safety

| Low Voltage Equipment Directive 2006/95/EC                      |  |
|-----------------------------------------------------------------|--|
| Safety Requirements<br>EN 61010-1: 2010<br>EN 61010-2-030: 2010 |  |

# INDEX

|                                  |     |                                 |          |
|----------------------------------|-----|---------------------------------|----------|
| 2M memory length limits .....    | 110 | menu tree .....                 | 26       |
| AC coupling .....                | 92  | specification .....             | 143      |
| Accumulating waveform .....      | 83  | Cycle time measure .....        | 56       |
| Acquisition .....                | 78  | Data logging                    |          |
| menu tree .....                  | 25  | menu tree .....                 | 44       |
| specification .....              | 142 | overview .....                  | 74       |
| Addition .....                   | 64  | run .....                       | 77       |
| Amplitude measure .....          | 55  | setup .....                     | 75       |
| Auto set .....                   | 49  | source .....                    | 75       |
| exception .....                  | 50  | DC coupling .....               | 91       |
| specification .....              | 143 | Declaration of conformity ..... | 147      |
| type .....                       | 49  | Default setup .....             | 125      |
| Auto trigger .....               | 96  | contents .....                  | 45       |
| Automatic measurement .....      | 58  | menu tree .....                 | 32       |
| menu tree .....                  | 31  | Delay measure .....             | 56       |
| overview .....                   | 55  | Delay mode .....                | 80       |
| specification .....              | 143 | Delay Off .....                 | 81       |
| Automatic measurement gating     |     | Delay On .....                  | 80       |
| .....                            | 57  | Display .....                   | 84       |
| Average acquisition .....        | 79  | contrast setting .....          | 84       |
| Average voltage measure .....    | 56  | diagram .....                   | 20       |
| Bandwidth limitation .....       | 94  | grid setting .....              | 84       |
| Blackman window .....            | 64  | menu tree .....                 | 27       |
| Calibration                      |     | specification .....             | 143      |
| menu tree .....                  | 41  | Display image                   |          |
| Calibration, vertical resolution |     | faq .....                       | 138      |
| .....                            | 134 | file format .....               | 109      |
| Caution symbol .....             | 8   | recall menu tree .....          | 33       |
| Channel .....                    | 47  | save .....                      | 121      |
| faq .....                        | 137 | save menu tree .....            | 35       |
| menu tree .....                  | 25  | Disposal instructions .....     | 11       |
| Cleaning the instrument .....    | 10  | Dot waveform .....              | 83       |
| Configure remote control .....   | 106 | Duty cycle measure .....        | 56       |
| Coupling mode .....              | 91  | Edge trigger .....              | 99       |
| menu tree .....                  | 25  | menu tree .....                 | 38       |
| Cursor .....                     | 61  | EN 61010-031 .....              | 144, 145 |
| faq .....                        | 137 | EN61010                         |          |
|                                  |     | measurement category .....      | 9        |

|                                    |        |                                 |     |
|------------------------------------|--------|---------------------------------|-----|
| pollution degree.....              | 11     | faq .....                       | 137 |
| Environment.....                   | 143    | High voltage measure .....      | 55  |
| safety instructions .....          | 10     | Holdoff .....                   | 98  |
| Equivalent time sampling.....      | 82     | Horizontal .....                | 85  |
| Expand Center .....                | 92     | basic operation.....            | 51  |
| Expand Ground .....                | 92     | cursor operation.....           | 61  |
| External trigger .....             | 96     | menu tree .....                 | 28  |
| input terminal .....               | 18     | position.....                   | 85  |
| Falling time measure.....          | 56     | scale .....                     | 85  |
| Faq .....                          | 138    | specification.....              | 142 |
| FFT .....                          | 65     | Image .....                     |     |
| menu tree .....                    | 30     | recall .....                    | 129 |
| overview .....                     | 63, 64 | Ink saver .....                 |     |
| File format.....                   | 109    | in hardcopy .....               | 116 |
| Firmware version.....              | 107    | in print.....                   | 132 |
| Flattop window.....                | 64     | in save all .....               | 122 |
| Force trigger .....                | 103    | Input frequency indicator ..... | 20  |
| Frequency measure .....            | 56     | Invert waveform .....           | 93  |
| Frequency rejection .....          | 98     | Language selection .....        | 107 |
| Front panel diagram.....           | 15     | List of features.....           | 13  |
| Fuse replacement .....             | 140    | Low voltage measure .....       | 56  |
| safety instruction .....           | 10     | Math .....                      |     |
| Gated Automatic measurements ..... | 57     | faq .....                       | 137 |
| General purpose signal .....       | 53     | menu tree .....                 | 29  |
| Go-NoGo .....                      |        | overview .....                  | 63  |
| conditions .....                   | 69     | Measurement .....               | 47  |
| menu tree .....                    | 40     | Memory Length .....             |     |
| overview .....                     | 67     | faq .....                       | 139 |
| run.....                           | 73     | Model comparison .....          | 13  |
| source .....                       | 68     | Multiplication.....             | 64  |
| template .....                     | 69     | Negative peak measure.....      | 55  |
| when .....                         | 68     | Noise rejection.....            | 98  |
| Ground .....                       |        | Normal acquisition .....        | 78  |
| coupling .....                     | 91     | Normal trigger.....             | 97  |
| symbol.....                        | 8      | NTSC .....                      | 97  |
| terminal .....                     | 17     | Operating environment.....      | 143 |
| Hanning window.....                | 64     | Overshoot voltage measure ..... | 56  |
| Hardcopy .....                     | 115    | Page size .....                 |     |
| Hardcopy - Print .....             |        | in print.....                   | 133 |
| menu tree .....                    | 42     | PAL .....                       | 97  |
| Hardcopy - Save All .....          |        | Peak detect acquisition.....    | 79  |
| menu tree .....                    | 41     | Peak to peak measure .....      | 55  |
| Hardcopy - Save image .....        |        | Peak voltage measure .....      | 55  |
| menu tree .....                    | 42, 44 | Power on/off .....              |     |
| Help.....                          | 46     | safety instruction .....        | 10  |
|                                    |        | switch overview.....            | 19  |

|                                    |     |                                   |     |
|------------------------------------|-----|-----------------------------------|-----|
| Preshoot voltage measure .....     | 56  | Setting up the oscilloscope ..... | 21  |
| Print.....                         | 131 | Setup                             |     |
| Probe .....                        | 135 | default contents .....            | 45  |
| attenuation level .....            | 94  | file format .....                 | 112 |
| attenuation menu tree.....         | 25  | how to save .....                 | 118 |
| compensation menu tree .....       | 43  | recall .....                      | 126 |
| compensation signal overview...    | 53  | recall menu tree .....            | 32  |
| faq.....                           | 138 | save menu tree .....              | 34  |
| peak detect demonstration.....     | 79  | Single trigger .....              | 103 |
| Pulse time measure .....           | 56  | Single trigger mode .....         | 97  |
| Pulse width trigger.....           | 101 | Specifications.....               | 141 |
| condition .....                    | 98  | faq .....                         | 139 |
| menu tree .....                    | 38  | Subtraction.....                  | 64  |
| Real time sampling.....            | 82  | System information .....          | 107 |
| Rear panel diagram.....            | 19  | Timebase indicator .....          | 85  |
| Recall.....                        | 124 | Trigger.....                      | 96  |
| default setup.....                 | 125 | coupling .....                    | 98  |
| image .....                        | 129 | edge.....                         | 99  |
| menu tree .....                    | 32  | force .....                       | 103 |
| reference waveform .....           | 126 | indicator .....                   | 96  |
| setup .....                        | 126 | level knob.....                   | 98  |
| waveform.....                      | 127 | menu tree .....                   | 37  |
| Rectangular window.....            | 64  | parameter.....                    | 96  |
| Reference waveform                 |     | pulse width.....                  | 101 |
| menu tree .....                    | 34  | specification.....                | 142 |
| recall .....                       | 126 | status indicator .....            | 20  |
| Remote control interface..104, 105 |     | video .....                       | 100 |
| Rising time measure.....           | 56  | UK power cord.....                | 12  |
| Roll mode .....                    | 86  | USB                               |     |
| Root mean square measure .....     | 56  | file operation .....              | 113 |
| Run/stop .....                     | 50  | file utilities menu tree .....    | 36  |
| faq.....                           | 138 | Utility                           |     |
| Save .....                         | 117 | key overview .....                | 16  |
| display image .....                | 121 | menu tree .....                   | 40  |
| menu tree .....                    | 32  | Vector waveform .....             | 83  |
| setup .....                        | 118 | Vertical.....                     | 91  |
| specification.....                 | 143 | basic operation .....             | 52  |
| waveform.....                      | 119 | cursor operation.....             | 62  |
| Save all .....                     | 122 | position.....                     | 91  |
| menu tree .....                    | 36  | resolution calibration.....       | 134 |
| SECAM .....                        | 97  | scale .....                       | 91  |
| Security lock slot.....            | 19  | specification.....                | 142 |
| Serial number .....                | 107 | Video line.....                   | 97  |
| Service operation                  |     | Video trigger .....               | 100 |
| about disassembly.....             | 9   | menu tree .....                   | 37  |
| contact .....                      | 139 | Warning symbol .....              | 8   |
| Setting the handle.....            | 21  | Waveform                          |     |

|                        |     |                            |        |
|------------------------|-----|----------------------------|--------|
| expand waveform .....  | 92  | save menu tree .....       | 35     |
| file format .....      | 109 | x-y mode .....             | 88, 89 |
| invert waveform .....  | 93  | zoom mode .....            | 87     |
| Memory depth .....     | 110 | Waveform accumulation..... | 83     |
| recall .....           | 127 | X-Y mode .....             | 88, 89 |
| recall menu tree ..... | 33  | specification.....         | 142    |
| roll mode.....         | 86  | Zoom waveform.....         | 87     |
| save .....             | 119 |                            |        |